


QUICK START

SOFTER

SF500PRO | SF600PRO


SF700PRO | SF800PRO

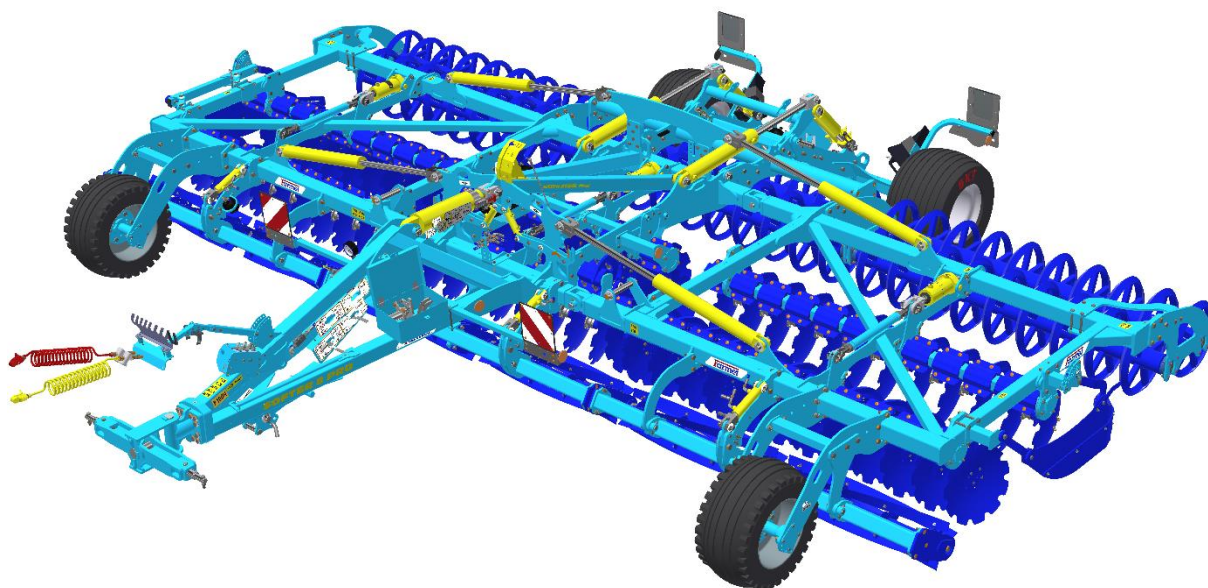










Edition: 6 | effective from: 1. 6. 2025





- (CZ) Návod Quick Start nenahrazuje návod k použití!
- (GB) The Quick Start guide is not a substitute for the instruction manual!
- (D) Die Schnellstartanleitung ist kein Ersatz für die Bedienungsanleitung!
- (F) Le guide de démarrage rapide ne remplace pas le manuel d'instructions!
- (RU) Руководство по быстрому запуску не является заменой инструкции по эксплуатации!
- (PL) Podręcznik szybkiego startu nie zastępuje instrukcji obsługi!

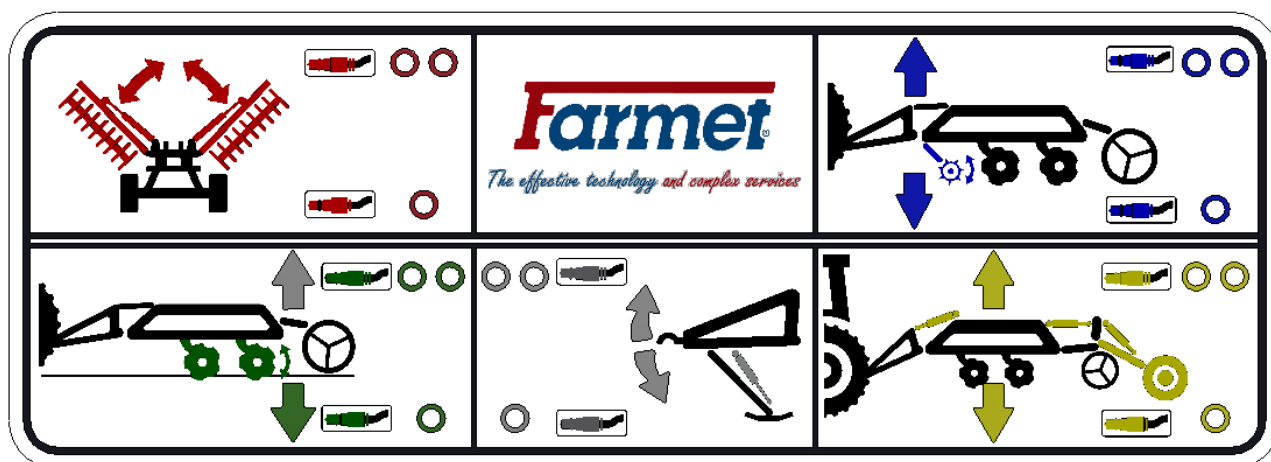

 

Machine unfolding procedure – work position

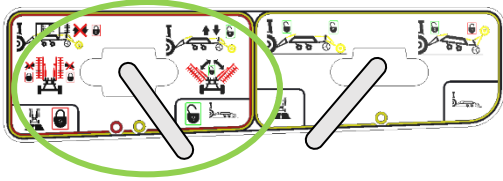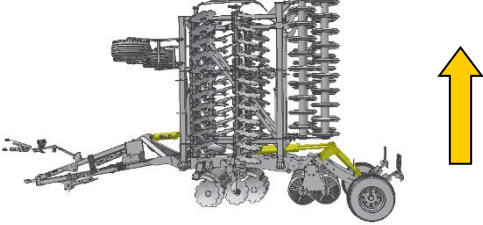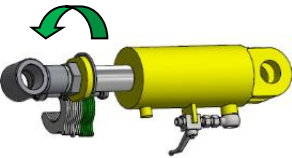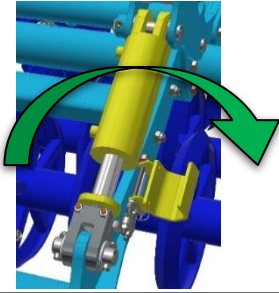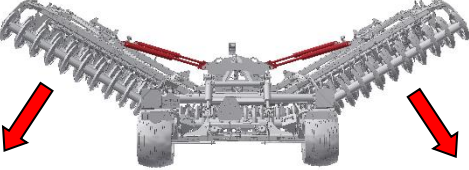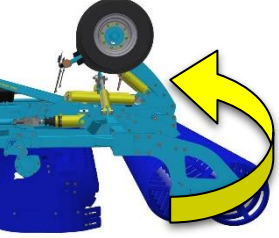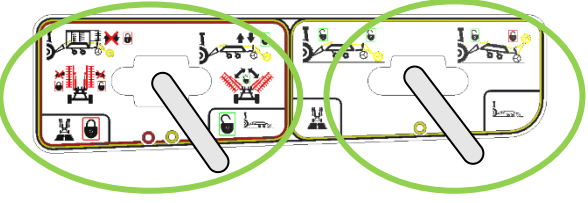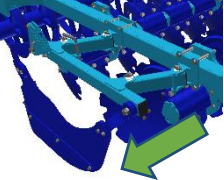
1a		
1b		
2a		 
2c		  80 bar/1160 Psi 
2d		
3a		 


2a

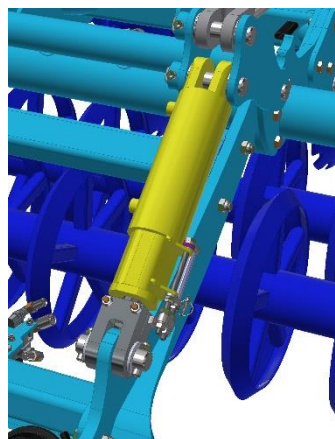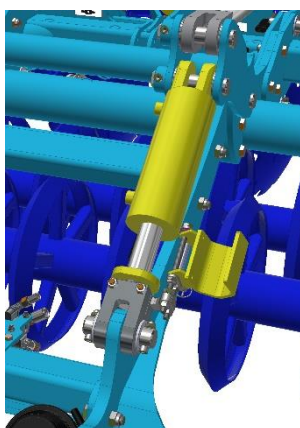

2b

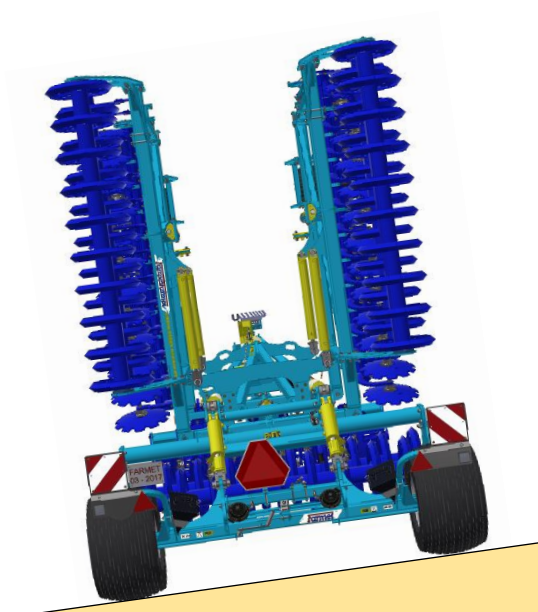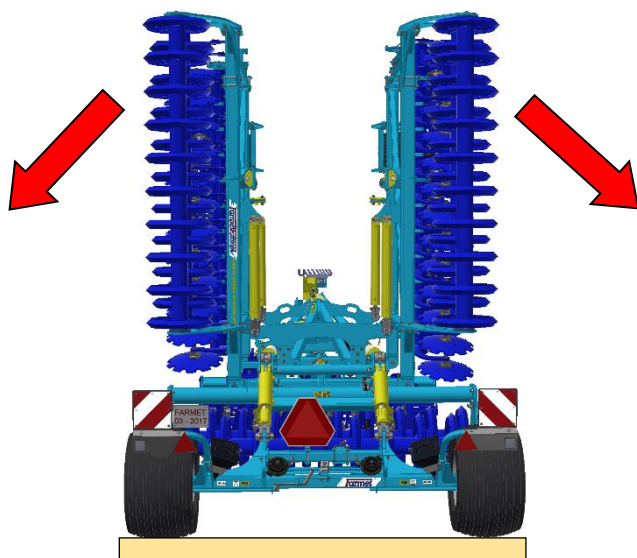


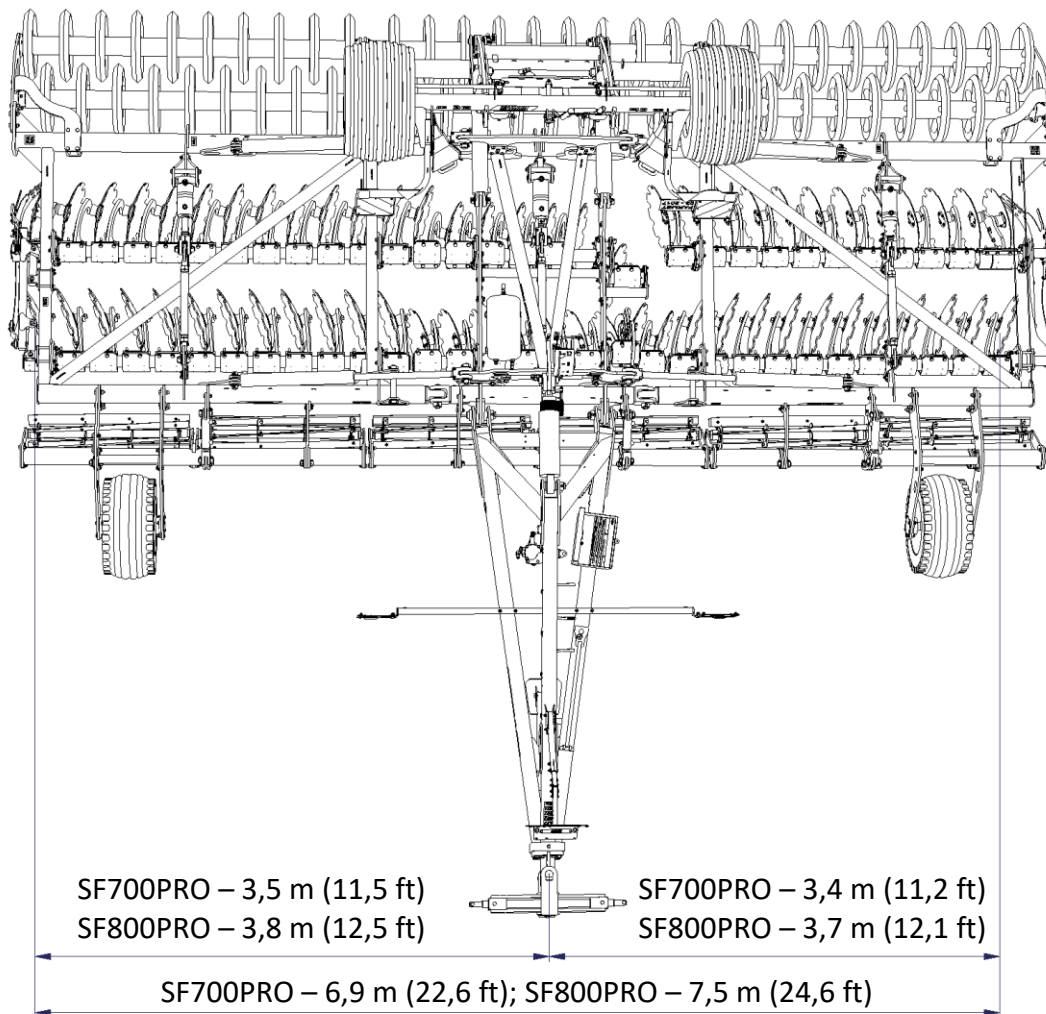

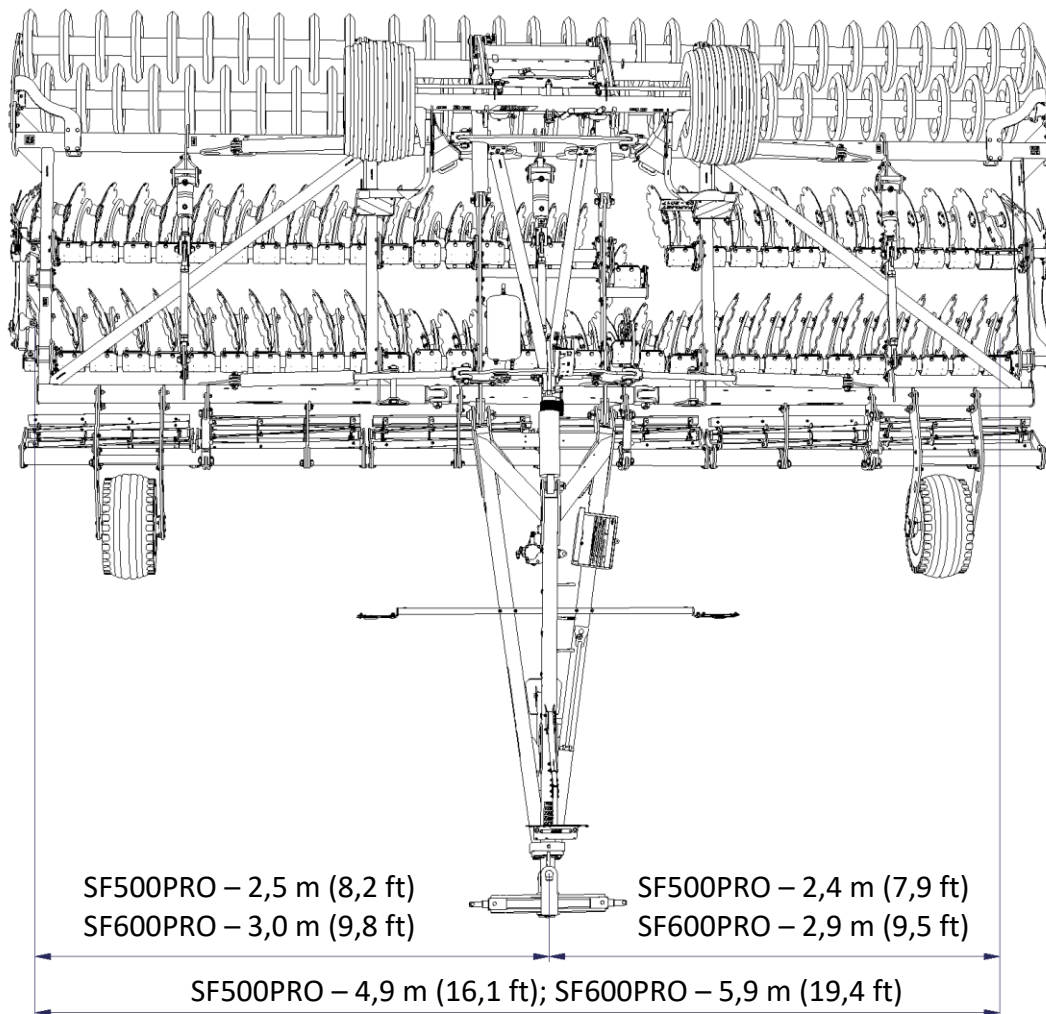


1

h [cm / in]		
0		70 / 28
2	▬▬	64 / 25
4	▬▬▬▬	59 / 23
6	▬▬▬▬▬▬	53 / 21
8	▬▬▬▬▬▬▬▬	47 / 19
11	TRANSPORT	


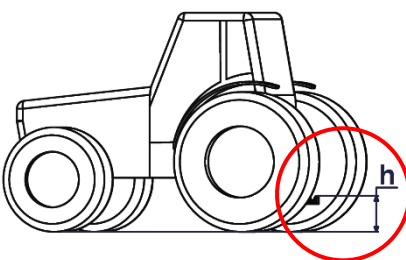




The diagram shows a side profile of a tractor. A red circle highlights the rear wheel assembly, including the tire and the axle. A dimension line labeled 'h' indicates the height from the ground to the top of the rear wheel.




2


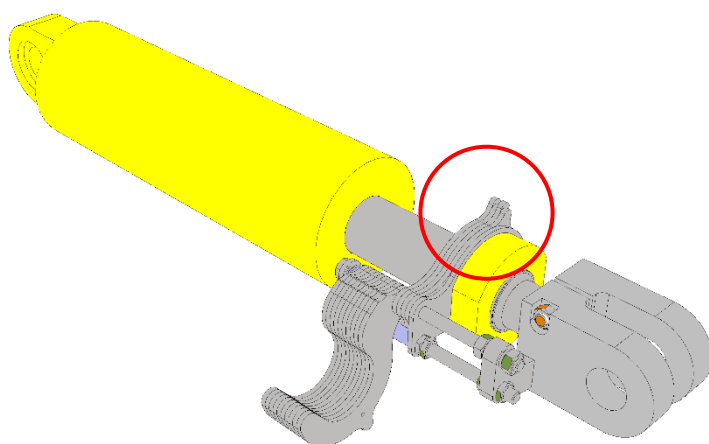


3

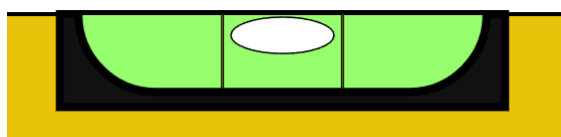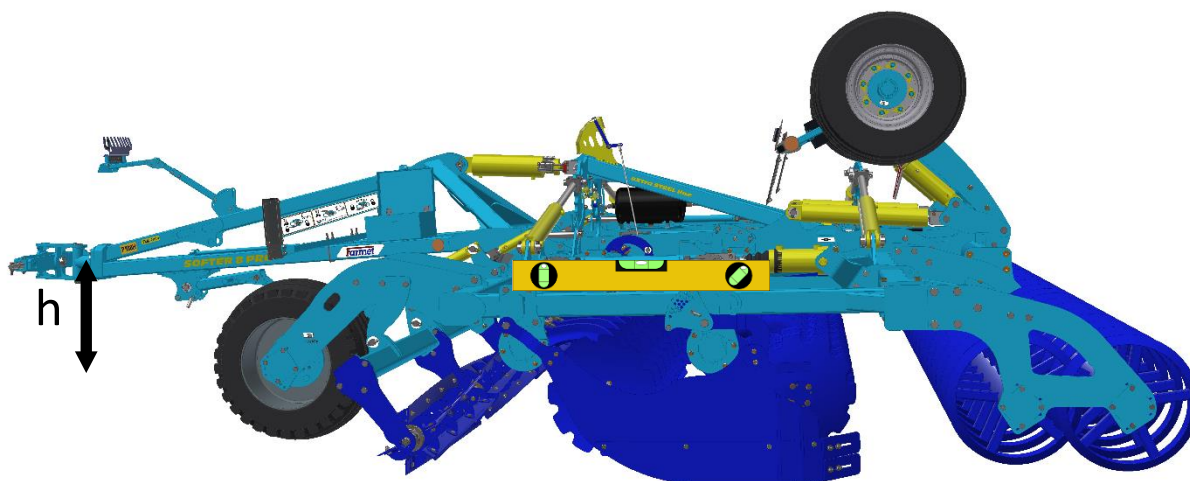





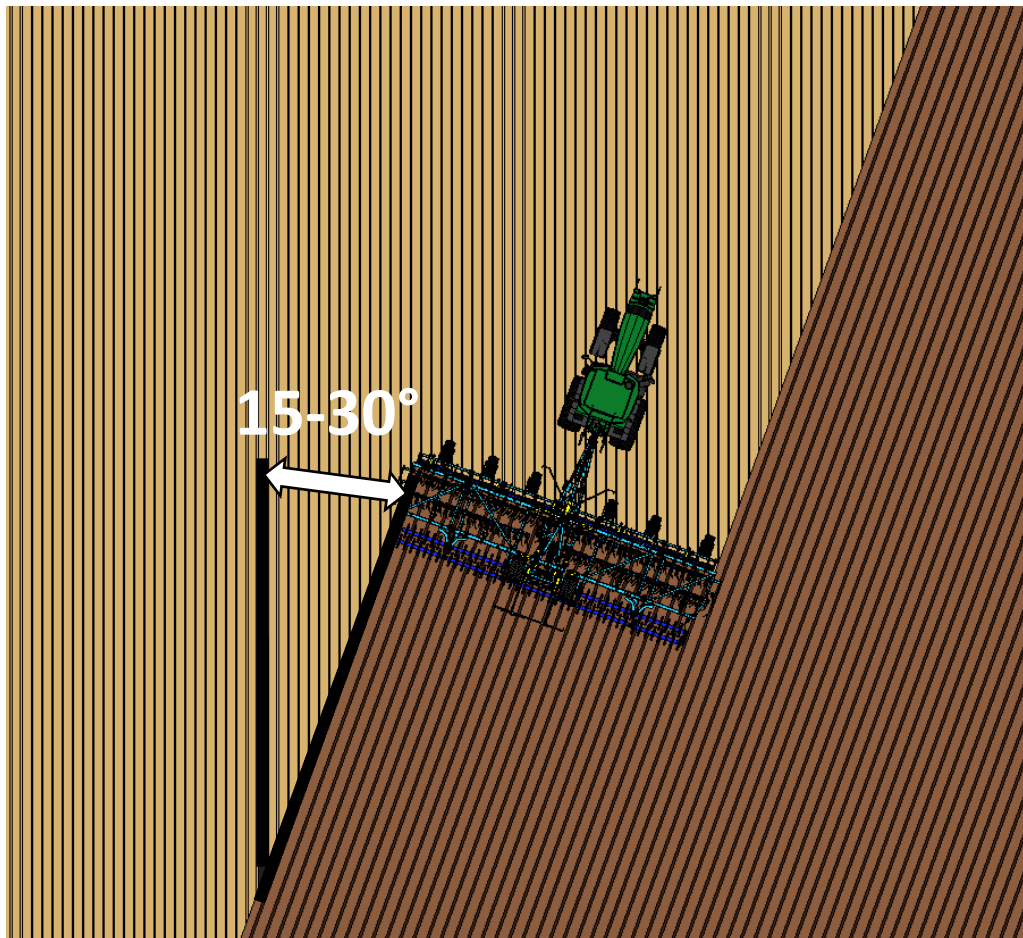
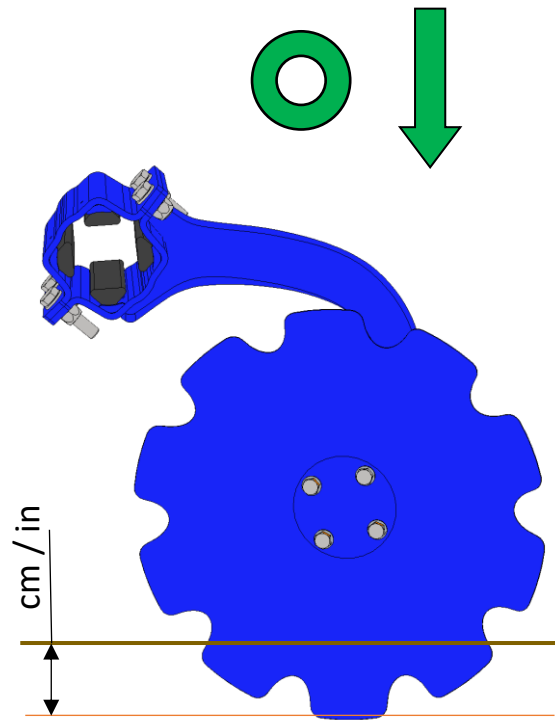


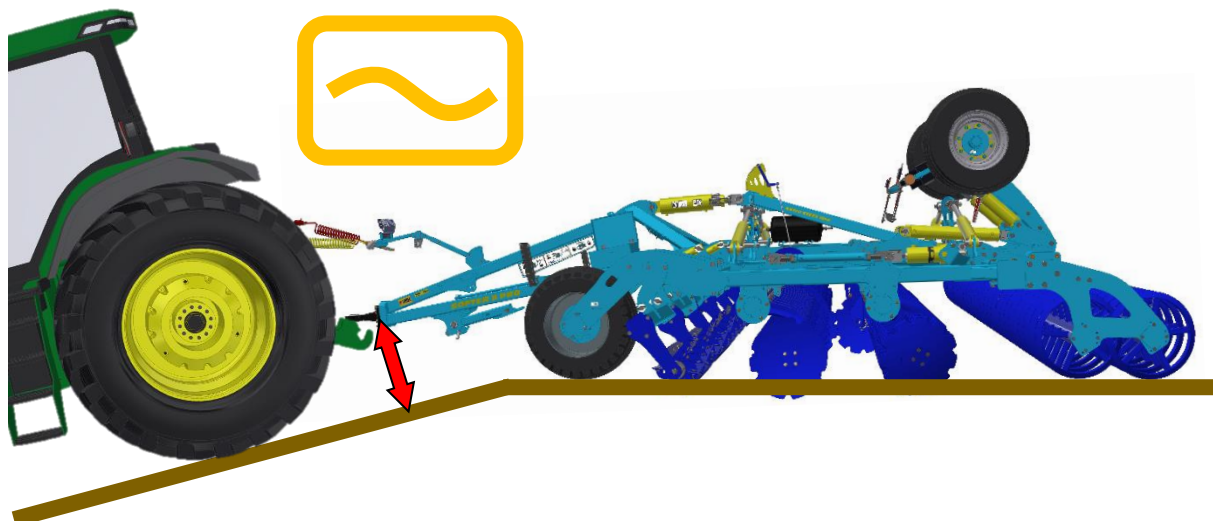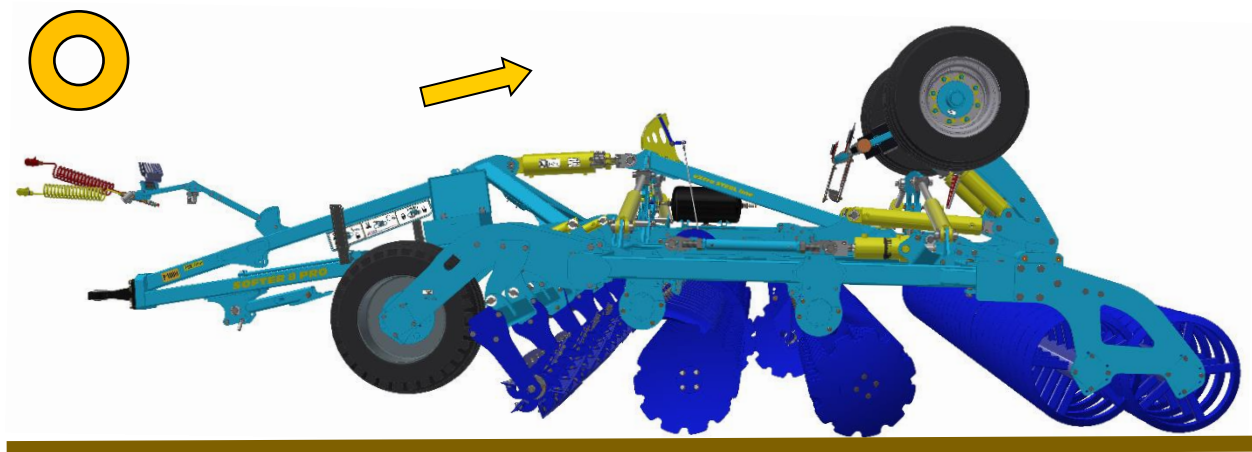
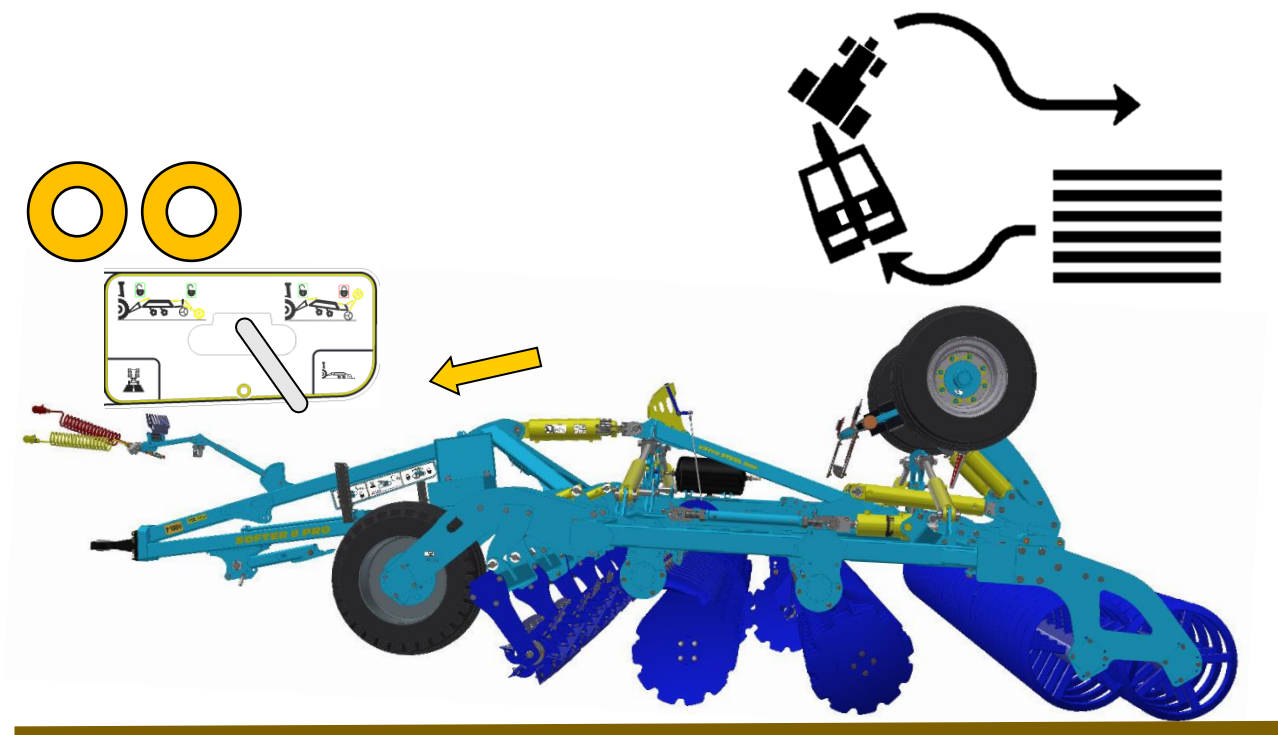


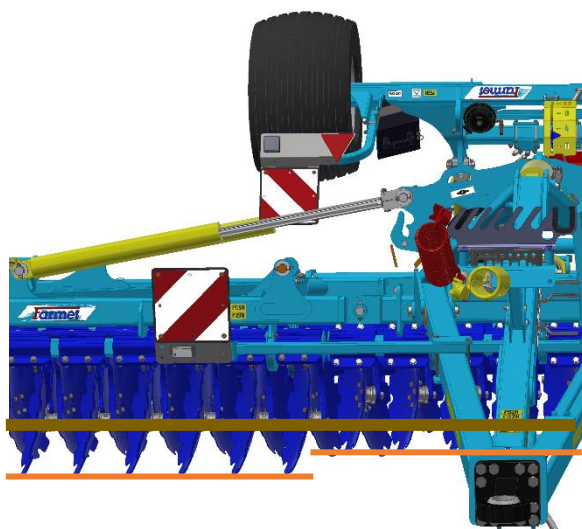
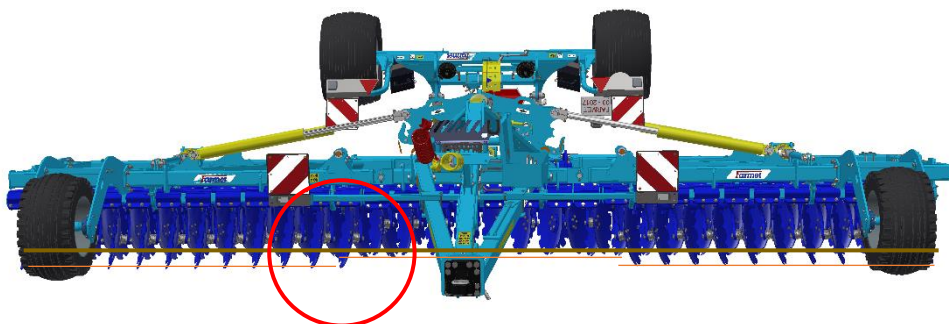


○ 5 s


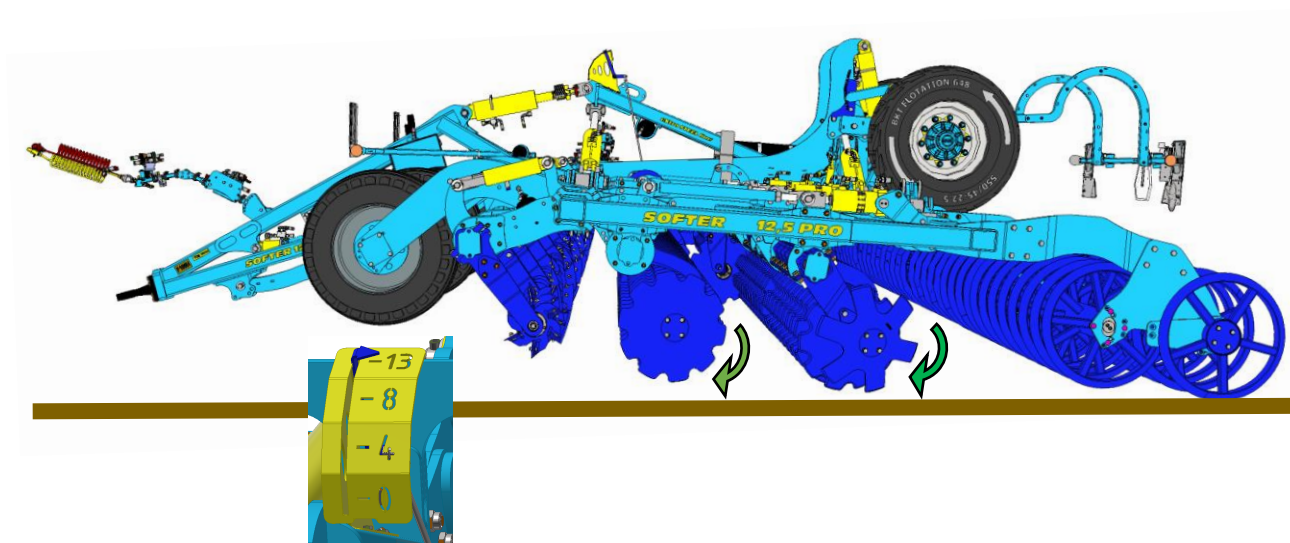


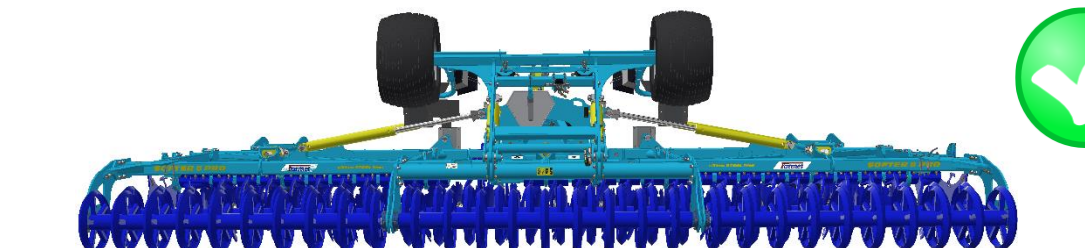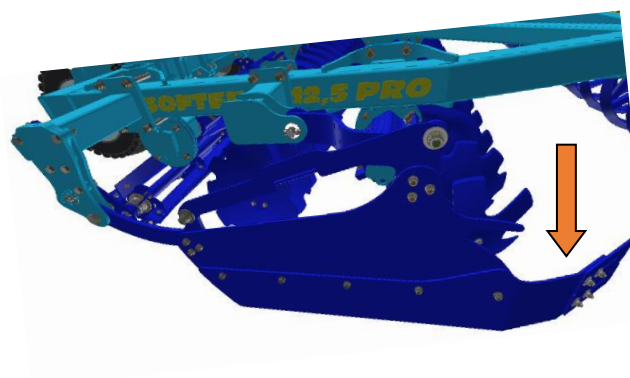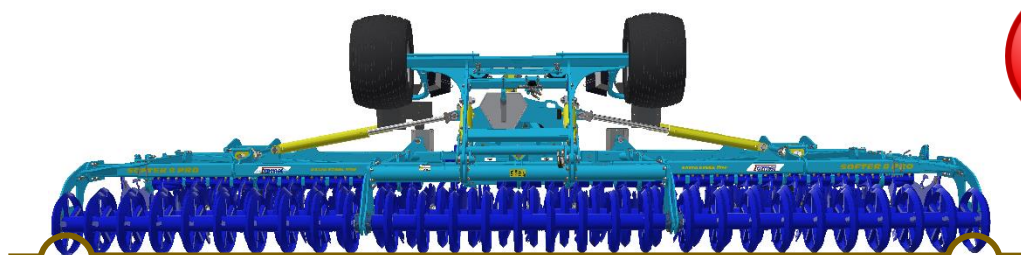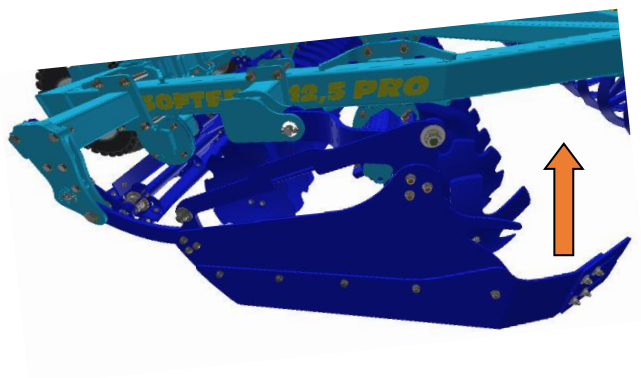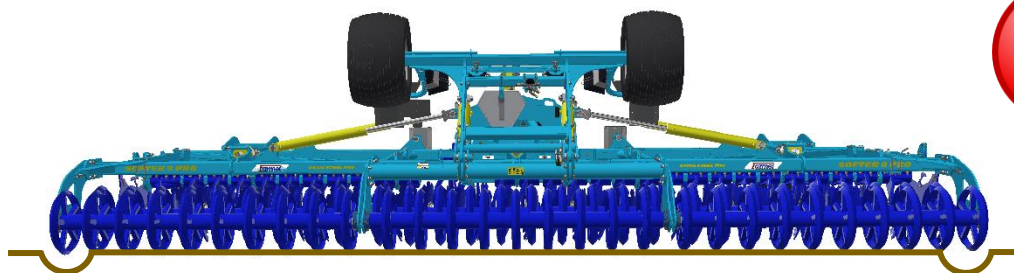

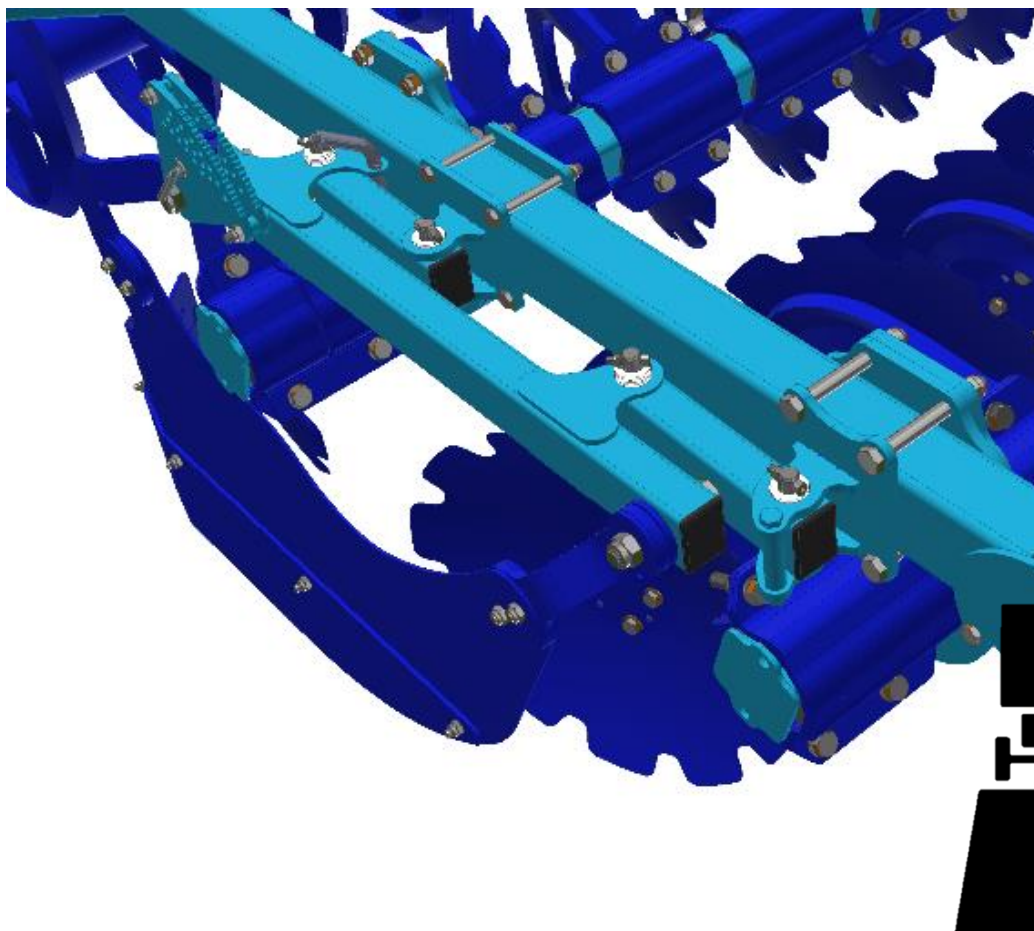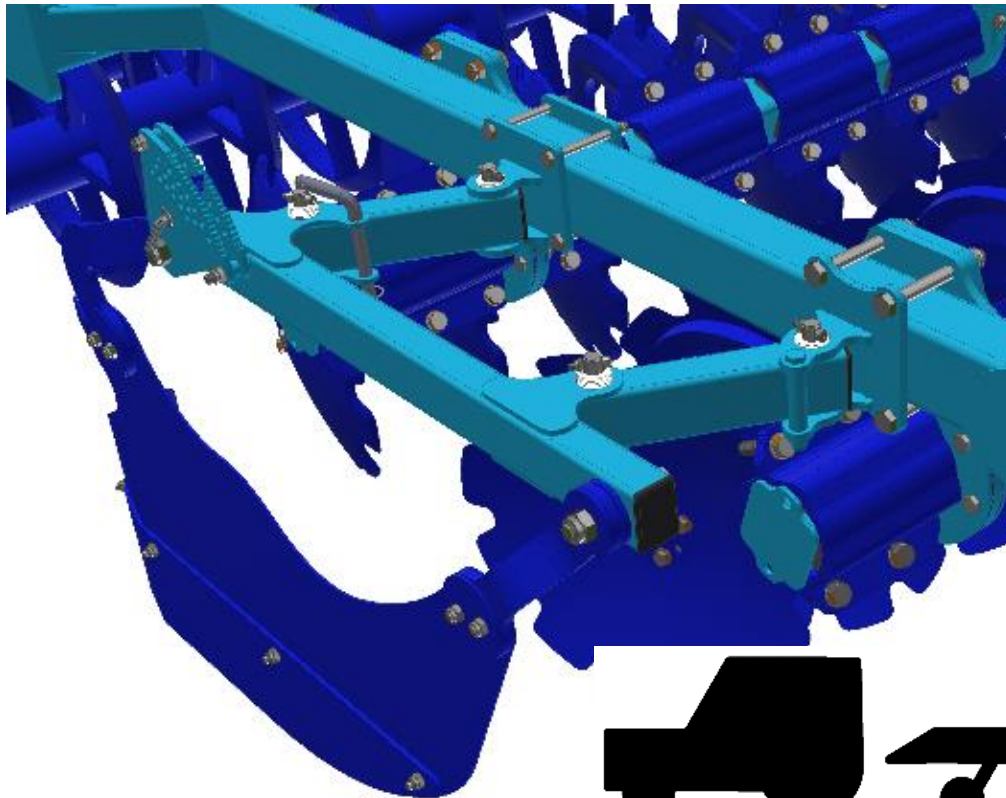

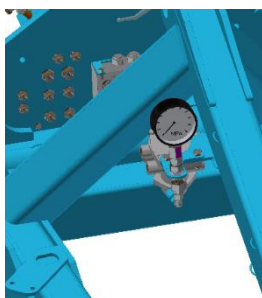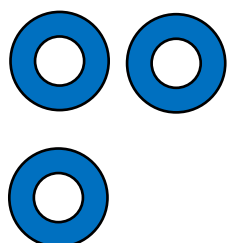




MAX 70 bar/1015 Psi

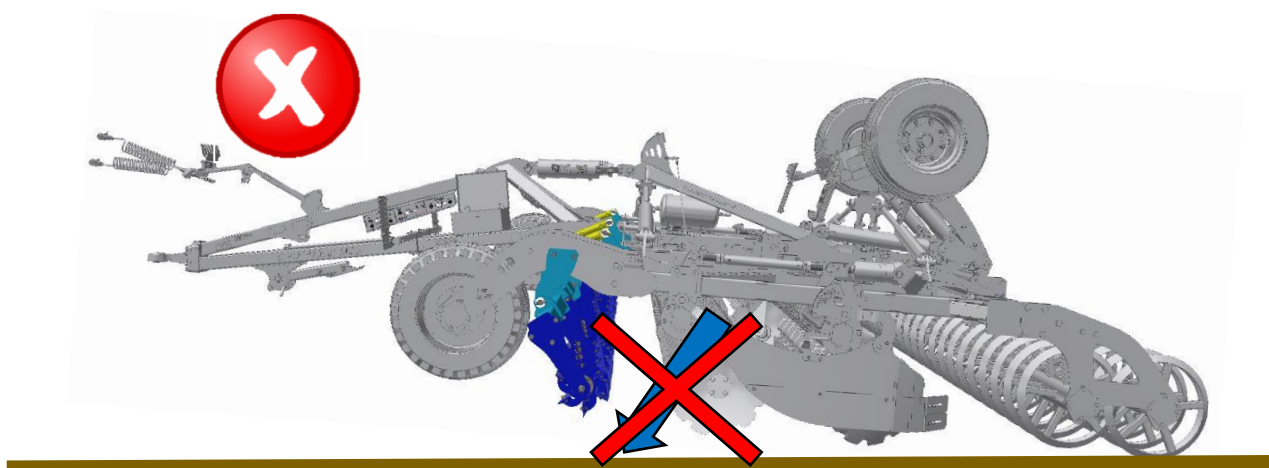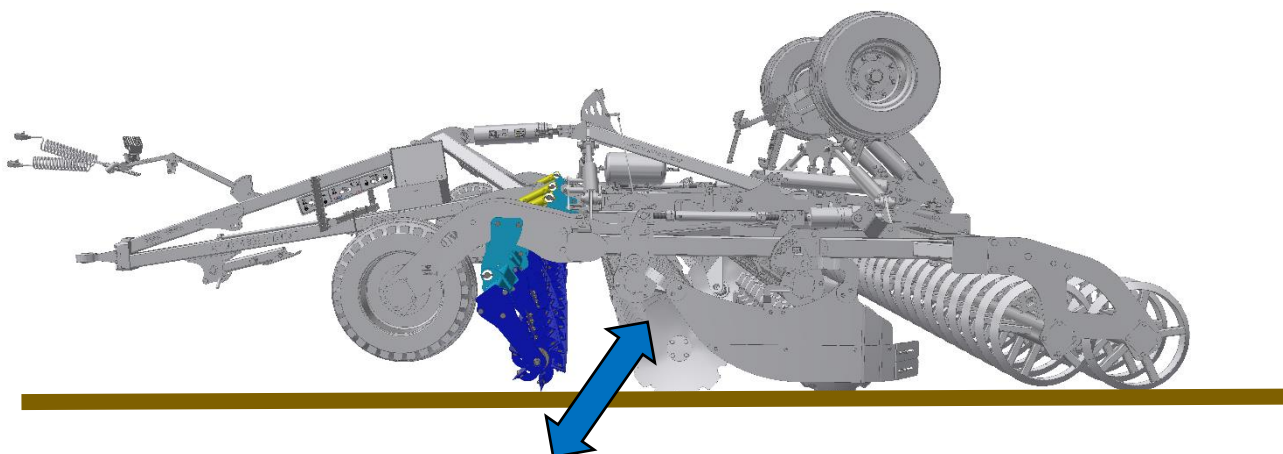

Machine folding procedure – transport position

1a		
1b		
1c		
1d		
2a		
2b		
2c		
3		

1d

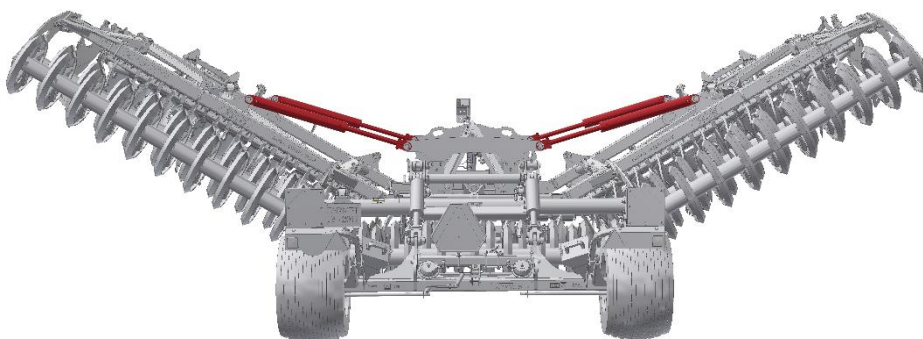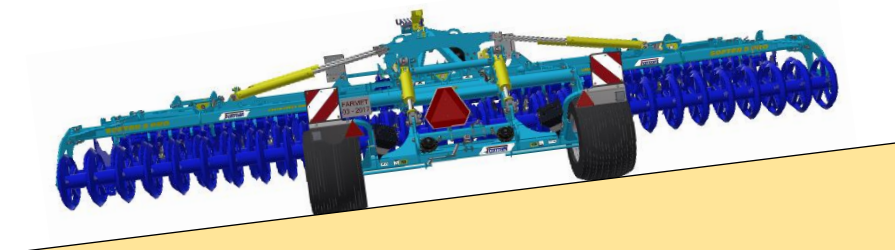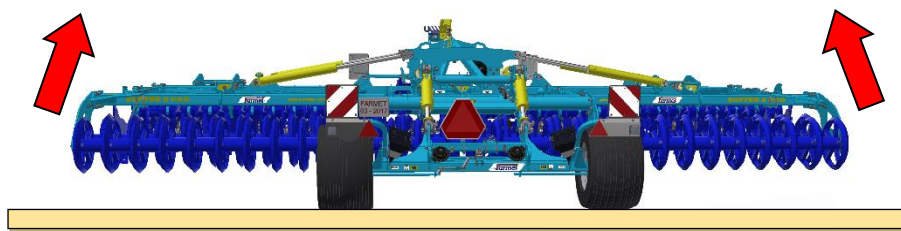

2c

