


OPERATING MANUAL

FALCON PRO TANDEM / FERT +

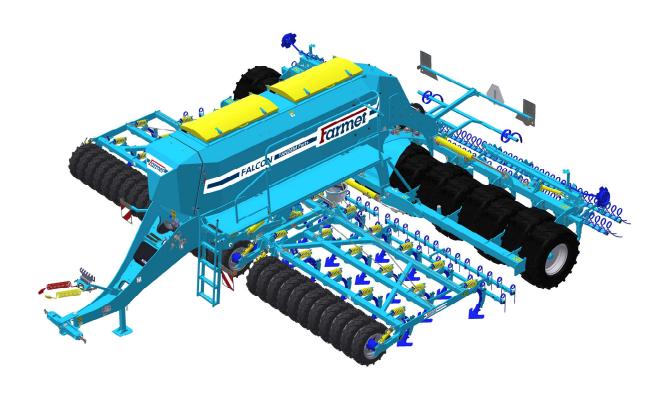

SN: 2024/0693

VIN:

FARMET a.s.

Jiřinková 276

Edition: 3 Effective from: 01.06.2024

552 03 Česká Skalice, CZ

phone: +420 491 450 111 GSM: +420 774 715 738

Id. No.: 46504931 Tax Id. No.: CZ46504931 web: www.farmet.cz e-mail: dzt@farmet.cz

TUV NORD

TÜV NORD CERT

^ა0 900`



Prepared by: Technical Department, Farmet a.s. on 18.06.2024, changes reserved



PREFACE

Thank you for purchasing a Farmet machine. Thank you also for your trust, which is inspiring and binding for us.

Farmet a.s. is a dynamically developing Czech company engaged in the development, production, sale and service of agricultural machinery for tillage, fertilizer application and sowing, as well as technologies for the processing of oilseeds, vegetable oils and feed production.

The Farmet brand is focused on products of high quality and high utility value with use in productive agricultural and processing operations. Farmet is a partner of modern agriculture and food industry in many markets around the world.

Our own products and technologies are created in close cooperation between Farmet specialists and end customers, research institutions and universities, which is why our products often have unique technical solutions according to the requirements of agricultural practice.

Significant investments in development and modern production operations are a guarantee of further development in the field of quality and new productive production technologies. Our goal is to further increase the added value of products and strengthen their competitiveness in all markets, increase user comfort, occupational safety and environmental protection.

Ing. Karel Žďárský CEO and Chairman of the Board of Directors







AGRICULTURAL MACHINES



















OIL & FEED TECH















IMPORTANT

READ CAREFULLY BEFORE USE

KEEP FOR FUTURE REFERENCE





Contents

PREFACE	3
1 MACHINE CONFIGURATION	11
2 QUICK START	12
3 Technical parameters	13
4 GENERAL INSTRUCTIONS FOR USE4.1 Safety tools	
5 MACHINE TRANSPORT USING TRANSPORT MEANS	16
6 MACHINE HANDLING USING LIFTING EQUIPMENT	17
7 MACHINE TRANSPORT ON ROADS	18
8 WORK SAFETY LABELS	19
9 DESCRIPTION	21
10 COMMISSIONING	22
10.1 Agregation to a tractor	
10.2 Hydraulics connection	
10.3 Connection of the electronic part of the machine	
10.3.1 Connection to tractor battery + Müller terminal	∠6
Müller terminal	28
10.3.3 Connecting the machine via the tractor's ISOBUS socket +	
Tractor terminal	29
10.3.4 Selecting and setting up the virtual terminal (VT) and task manager (TC)	30
11 MACHINE FAN	
11.1 Fan with separate drive on PTO	. 33
11.2 Fan speed setting according to seed	
11.3 Fertilizing air control valve	
12 Adjusting the longitudinal and transverse planes of the machine	36
12.1 Longitudinal plane of the machine	
•	
13 Setting the harrow after the seeding share section	
14 Adjusting the harrow after the rubber-tyred packer	
15 PRESSURE SYSTEM OF THE MACHINE	
16 Sowing off	
17 ELECTRONIC MACHINE CONTROL MÜLLER ELECTRONIC	
17.1 Work screen	
17.2 Information 17.3 Creating a task with a computer	
17.3 Creating a task with a computer	45 45
17.5 Unfolding and folding the machine	46
17.6 GPS settings for machines when unfolding in the hall	47
17.7 Unfolding the machine	48
17.8 Folding the machine	
17.9 Control and settings of the markers	DU



	17.9.1 Settings of aggressivity of the markers	
	17.9.2 The markers control	
	17.9.4 Swamp function	
,	17.10 Enter the hopper fill	
	17.11 User product database	
•	17.12 Assignment of the motor to the given hopper	57
•	17.13 Activation / Deactivation dispenser	58
	17.14 Seed flow sensing Dickey-John-deactivation	
	17.15 Acoustic Signal When Seeding Is Interrupted	60
18 RAIL		
	18.1 Rail lines set on and off	
•	18.2 Steps for setting the tramline rhythm correctly	
	18.2.1 Even tramline rhythms	
	18.2.2 Odd rhythms of tramlines	
,	18.3 The most frequently used tramline settings	
,	18.4 Rail line valves	74
	18.5 Air pressure reducing valve of the tramlines	
	18.6 Tramline markers	
19 FARI	MET DISPENSER	77
	19.1 Dispenser function test	
	19.2 Rough seeds	
	19.3 Roller replacement	
•	19.4 Rollers for fine seeds	82
20 SOW	ING TEST	83
	20.1 Hose distribution type	
	20.2 Sowing test	
	20.3 Sowing tables for FARMET dispenser	
	INGS OF SEED SECTION	
2	21.1 Sowing depth setting	
	21.1.1 Recommended depth	
	21.2 Seeding and supplementary fertilisation share	
	E CONTROL	93
2	22.1 Auger metering unit of fertilization	
	22.1.1 Hydraforce fertilizer engine valve	
	22.1.3 Oil filter for fertilizing hydraulic circuit	90
2	22.2 Setting the mixer flap	
	JSTIN THE DOSE DURING WORK	
	TYING THE HOPPER USING ELECTRONICS	
	KING POSITION SOURCE	
	RCE SPEED MACHINERY	
	HINE GEOMETRY	
	HINE LIGHTING	

Farmet	PREFACE
29 CONTROLLING SECTIONS MANUALLY (SECTION CONTROL)	105
30 TRAY PARTITION	107
31 BRAKES31.1 Air brake31.2 Parking brake	109
32 HANGING THE MACHINE ON A CRANE	111
33 ERROR MESSAGES	112
34 MACHINE MAINTENANCE AND REPAIRS 34.1 Maintenance plan 34.1.1 MACHINE LUBRICATION SCHEDULE 34.1.2 Handling of lubricants 34.1.3 Tire pressure 34.1.4 Recommended tightening torques	119 123 123
35 MACHINE STORAGE	126
36 ENVIROMENTAL PROTECTION	127
37 MACHINE DISPOSAL AFTER SERVICE LIFE EXPIRY	128
38 SERVICING AND WARRANTY CONDITIONS	129






1 MACHINE CONFIGURATION

Serial number of the machine	2024/0693
VIN	
Machine code	T3/NB/WA/FD1/GW/NS/TL2/24SF/V2/CO/BM/MT/ SK/SLS/S1/S2/T8
Additional equipment	1V7/1V250/1V500
HW ECU	03.03.00
SW ECU	02.07.13

Machine equipment		
	V1 small fan	
	V1F small fan + fertilization	
×	V2F big fan + fertilization	
×	Auger metering unit of fertilizing	
	Roller fertilizing dispenser	
	Type of seed tube distributions – EC	
×	Type of seed tube distributions – HM	
	Terminal Basic	
	Terminal Smart 570	
X	Terminal Touch 800	
	Terminal Touch 1200	
	Licence Track Leader	
	☐ Licence Section control	
	Licence Multi control	
	☐ Licence Tramline management	
	Licence ISOBUS-TC	

The serial number of the machine is printed on the serial plate and on the machine frame. This machine serial number must always be stated when ordering service or spare parts. The type plate is located on the front of the hopper.

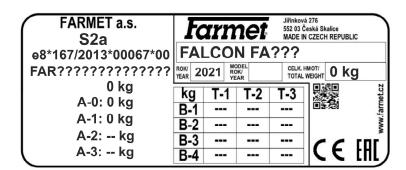



2 QUICK START

Point	Act	Chapter	
0	Safety notice	4	
1	Engage the Falcon with towing equipment	10.1	
2	Connect all hydraulic hoses, including the return drain	10.2	
3	Connect ISOBUS and the 7-pin cable of the machine's road lights	10.3.3	
4	Connect the machine electronics to the towing of vehicle	10.3	
5	Raise the front support leg of the machine and secure		
6	Unlock the front section tilt pins		
7	Open the tilt valve. (blue marker)	22	
8	Open the front preparation section lift valve.(yellow marker)	22	
9	Switch on the seed drill terminal with main switch 😃		
10	Unfold the machine using the hydraulic circuit and the control terminal	17.7	
11	Check that the seed drill is clean	19	
12	Check the squeegee for leaks in the seed drill	19	
13	Check the permeability of the fertilizer hoses	21.2	
14	Check the permeability of the seed hoses	21.2	
15	Sprinkle the seed	17.10	
16	Pour the fertilizer	17.10	
17	Adjust the machine plane and lock the tractor arms	12	
18	Adjust the sowing depth	21.1.1	
19	Set the pressure on the pressure reducing valve		
20	Depth adjustment of the front preparation section		
21	Perform a seed test 20.2		
25	Set the priority on the hydraulic circle of the fan	11	
26	Set the required oil flow for the fertilizer hydraulic motor 11		
27	Set the fan speed according to the seed and the rate	11.2	
28	Set the required hydraulic functions – markers, tramline markers, etc	17.9.2	



3 TECHNICAL PARAMETERS

Parameters	FALCON TANDEM 6	FALCON TANDEM 8
Working width (mm)	6 000	8 000
Transport width (mm)	3 0	00
Transport height (mm)	3 300	4 000
Total length of the machine (mm)	9 0	000
Working depth (mm)	0 –	100
Hopper capacity with fertilization (I) (distribution 40:60)	6 000	6 000 / 8500
Filling height of the hopper (mm)	2 930	2 930/ 3400
Filling hole size with fertilization (mm)	1 430 – 620	
Number of sowing tines	24	32
Work performance (ha/h)	147 – 200	205 – 280
Towing device (kW/HP) *	161 / 220 205 / 280	
Working speed (km/h)	8 – 15	
Maximum transport speed (km/h)	30	
Maximum slope accessability (°) 6		5
Tire size	405/70 R 20 / 420/65 R 20	
Brake type / distribution***	air / two-line	
Required pressure for brake control (kPa) ***	8,	5

Parameter	FALCON TANDEM 6	FALCON TANDEM 8	
Number of hydraulic circuits / pressure (bar)	4/200		
Type of quick couplings	6 / ISO 12,5		
Pressureless return flow (max. 5 bar)	1 / ISO 20		
Hydraulic fan oil flow (l/min)	30 – 40		
Oil flow for machine control (I/min)	50 – 60		
Electrical system requirement	12 V DC / 40 A		
Tractor hitch requirement	TBZ cat.3		
Weight of machine (kg) **	6 500 – 7500	9 100 – 10 780	

^{*} The actual tensile force can change significantly. Depending on the selected machine variant, depth of cultivation, soil conditions, slope of the land, wear of working bodies sand their adjustment

^{***} Alternative hydraulic brake/ operating pressure 130±5 bar.



Transport/Brake system: Observe the national regulations applicable to the transport of machines on public roads. Check the legal regulations in force in the country and the regulations on the maximum permissible gross weights and axle loads, as well ass on the necessary use of the brake system. If you have further questions, please contact our sale representative.

^{**} The weight of the machine varies depending on the equipment



4 GENERAL INSTRUCTIONS FOR USE

- 1. The machine is manufactured in accordance with the latest state of technology and approved safety regulations. Even that, there is a risk of injury to the user or third parties or damage to the machine or other property damage.
- 2. Use the machine only in harmless condition, in accordance with its intended use, with knowledge, with knowledge of possible dangers and in compliance with the safety instructions in these operating instructions. The manufacturer is not responsible for damage caused by using the machine in violation of the machine's limit parameters and the instructions for using the machine. The risk is born by user.

Immediately remove defects, that can negatively effect safety risk!



WARNING – This warning sign must be in the immediate danger of a dangerous situation, ending with serious injury or death.



ATTENTION – This warning sign alerts you to a situation that could result in minor or minor injury. It also alerts you to dangerous actions associated with activities that could damage the machine.



NOTICE—This warning sign indicates a technical recommendation.



RECOMMENDATION



PRESS

- 3. The machine may be operated by a person authorized by the operator under the following conditions:
- Must have a valid driving license of the relevant category
- · They must be demonstrably acquainted with the safety regulations for working with the machine
- He must be familiar with the machine instructions and the machine operator.
- They must know the meaning of the safety signs placed on the machine. Respecting them is important for safe and reliable operation of the machine.
 - 4. Maintenance and service repairs on the machine may only be performed by a person:
- Authorized by the operator.
- Demonstrably aguainted with the safety regulations for working with the machine.
- · When repairing a machine attached to tractor has to have the right category of driver license.
- 5. The operator of the machine must be sure of other persons safety when working with the machine or transporting the machine.
- 6. When transporting the machine or working on the field the machine operator have to control the machine from inside the cabin.
- 7. The machine operator can only enter the machine structure only at standstill position and when the machine is blocked from movement for the following reasons:
- Adjustments of working parts of the machine,
- Repair and maintenance of the machine,
- Unlock or secure the axle ball valves,
- Securing the axle ball valves before lowering the side frames,
- Adjustment working parts of the machine after folding side frames.
- 8. When climbing on the machine don't step on tires of the pneumatic roller or other spinning parts. They can spin and you can fall and have serious injuries.
- 9. However, the changes are, or adjustments on the machine can be done only with written agreement of the manufacturer. The manufacturer is not responsible for any damage resulting from non-compliance with this instruction. The machine must be maintained with the prescribed accessories, equipment and facilities, including safety markings. All warning and safety signs must be legible at all times and in place. In case of damage or loss the marks must be immediately renewed.
- 10. When working with machine the operator must have the Manual of using with requirements of safety work available.



11. The operator cannot using the alcohol when working with machine, or pills, or narcotics and halucinating substances, which they increased lower attention and coordinated abilities. If the operator must consume a pills prescribed by a doctor or consuming free pills for sale must be informed by a doctor that in these circumstances is capable to work responsibly and safely operate the machine.

4.1 Safety tools

For operation and maintenance:

- Tight-fitting clothes.
- Safety gloves and safety glasses for dust protection and sharp parts of the machine.





5 MACHINE TRANSPORT USING TRANSPORT MEANS

- 1. The means of transport designed to transport of the machine must have a load of capacity at least equal to the weight of the transported machine. The total weight of the machine is listed on the nameplate.
- **2.** The dimensions of the transported machine including the means of transport must meet with the valid regulations for operation on roads (decrees, laws).
- **3.** The transported machine must always be attached to the vehicle in such a way that it cannot be released spontaneously.
- **4.** The carrier is responsible for damage causes of an incorrectly or insufficiently attached machine to the vehicle.




6 MACHINE HANDLING USING LIFTING EQUIPMENT

- 1. Lifting equipment and binding instruments using for manipulation with the machine must have its own load capacity minimum equal with weight of the machine being handled.
- **2.** Attachment of the machine for manipulation may only be carried out in places designed for this purpose and marked with self-adhesive labels showing the "chain".———
- **3.** After attachment (suspension) in places designated for this purpose, it is forbidden to move in the area of possible reach of the manipulated machine.



7 MACHINE TRANSPORT ON ROADS

- The machine contains sharp structural projections.
- It is prohibited to operate and transport the machine on roads when visibility is reduced!! Persons or objects, or other road traffic participants could get caught
- The machine operator must be extra cautious when driving on roads and consider the width of the machine and safe distance from persons, vehicles and objects, or other road traffic participants!!

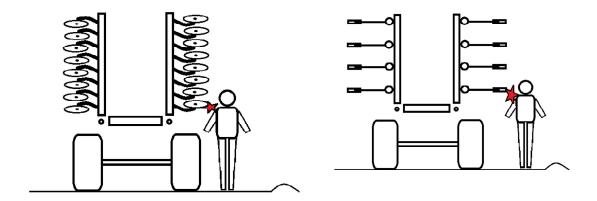

- The machine attached to the rear arms of tractor (TPH 3).
- The side frames must be folded down to a vertical position and secured.
- The machine must be equipped by removable rails with markable contours, functional lightnings and rear marking plate for slow vehicle (according to EHK NO.69).
- The lightning must be on public roads ready to operate.
- A tractor must be equipped by a special lightning system of orange colour, which must operate on public roads and be put into operation.
- The operator with respect on the measurements of the machine have to be careful and considered on the others drivers on the public roads.
- The operator must be sure to secure rear arms TPH of the tractor and put them in secure position when transporting the machine on public roads. At the same time the arms of the rear TPH tractor must be secured against lateral swing.



- It is strictly forbidden to transport people or cargo on the machine or to attach other machine, trailer or attachments to the machine.
- MMaximum transport speed limit on public roads is 30 km/hour.
- Prohibition of operation in reduced visibility!



• The machine can be operated on roads only if it is equipped with air brakes (the customer will receive a technical certificate). Otherwise, the machine must not be operated on public roads!



8 WORK SAFETY LABELS

Safety warning labels are used to protect operator.

In general:

- **1.** Strictly observe the safety warning labels.
- **2.** All safety instructions also apply to other users.
- 3. If the Safety label on the machine is damaged or destroyed, the OPERATOR MUST

REPLACE THIS LABEL WITH A NEW!



The position, appearance and the exact meaning of the occupational safety labels on the machine are determined in the following tables.


Tab.1: Self-adhesive safety warning labels are located on the machine

Positions	Safety label	Meaning of labels	Label stickers
on the machine	Suicty lawer		<u> Laber stickers</u>
1		Before the manipulation with the machine ready the instructions for using. When operating, follow the instructions and safety regulations for operating the machine.	P 1 H
2		When connecting or disconnecting do not enter between the tractor and the machine nor enter this area unless the tractor and machine are stationary and the engine is switched off.	
3		Stay out from the raised machine reach.	P 4 H
4		Stay out of the reach of the tractor – agricultural implement when the tractor engine is running.	
5		Before beginning of the transporting secure the axle against unexpected drop.	
6	**************************************	Stay out of reach when unfolding the service platform. P 20	
7		Driving and transporting the machine structure is strictly forbidden.	
8		Keep safe distance from electrical equipment when working or transporting the machine.	Р 39 Н



9	**************************************	When folding and unfolding the side frames and the service platform, stay out of their reach.	P 50 H
10	-19- A	Secure the machine against unexpected movement.	P 52 H
11		Do not be close to the rotating parts, unless these are not in calm position that means that they are not rotating.	P 53 H
12		It is forbidden to fold and unfold the side frames of the machine on a slope or on sloping surface.	P 100 H


• Position of the safety labels on the machine

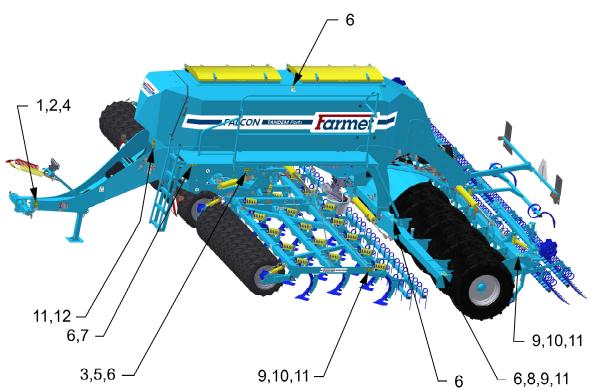



9 DESCRIPTION

- The Falcon PRO Tandem seed drill uses the modular Falcon PRO basis equipped with a front seeding section including a rubber-tyred packing roller and three rows of special seeding shares. The seeding shares are followed by an efficient levelling and harrowing system that provides excellent soil surface levelling and even distribution of crop residue.
- The rear rubber-tyred roller equipped with large low-pressure tyres has an exceptionally low pressure on soil even when the seed and fertiliser hoppers are completely full. The robust tyres are highly resistant to puncture and allow for machine transportation on low-quality roads at high speed and for long distances.
- The special seeding shares with tandem-arranged outputs for seeding and parallel fertiliser placement into the root zone provide quality seeding even in case of large quantities of crop residue in mulch-seeding technologies. Precise deep guidance by the rubber-tyred rollers allows for achieving seeding depth accuracy comparable with disc seed drills.
- The robust machine design is also suitable for rocky soils.

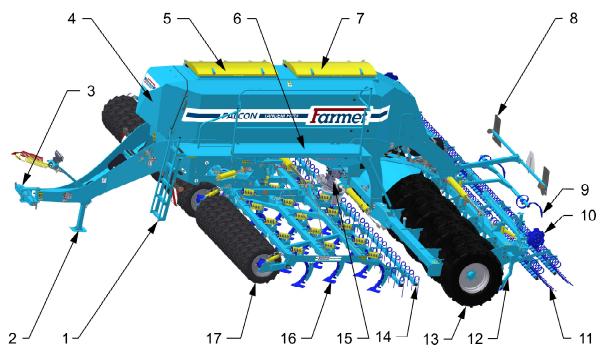

1	Access ladder	10	Marker
2	Folding supporting leg	11	Leveling set rear
3	Drawbar	12	Set of scrapers
4	Fan	13	Pneumatic flotation rammer
5	Fertilization hopper	14	Leveling set front
6	Service platform	15	Dispenser with mixer
7	Seed hopper	16	Set of ploughshares
8	Targets with road lighting	17	Rubber-tyred front packer
9	Tramline markers		



10 COMMISSIONING

- Before taking over the machine, check and control that it has not been damaged during transport and that all the parts contained in the delivery note have been delivered.
- Before putting the machine into operation read these operating instructions carefully.
 Before using the machine for the first time be familiar with yourself with controls and overall instructions.
- Aggregation of the machine with the tractor is to be performed on a flat and hardened surface.
- When working on slopes, observe the lowest slope grade of the set TRACTOR- MACHINE.
- The operator is obliged to retract the working bodies of the machine from the ground when turning at the headland.
- The operator is obliged to observe the prescribed working depths and speeds stated in the manual in chapter **3 and 21.1.1.** when working with the machine.
- The operator is obliged to lower the machine to the ground and secure the set against movement before leaving the tractor cabin.
- The machine showing signs of damage must not be put into operation.
- The operator is responsible for safety and for all damages caused by operation of the tractor and the connected machine.
- The machine may only be connected to a tractor whose curb weight is equal to or higher than the total weight of the connected machine.



10.1 Agregation to a tractor

Tractor engine power requirement for the machine FALCON TANDEM 6		147 kW
Tractor engine power requirement for the machine FALCON TANDEM 8		205 kW
Requirement for TPH	Spacing of lower suspension joints (measured on joint axels)	1010±1,5 mm, (can also be set 910±1,5 mm)
tractor	ø holes for lower suspension joints for machine suspension pins	ø 37,5, mm
	Electrical distributor circuit	Circuit pressure min.190 bar – max.230 bar 60 l/min., 2 pcs of quick coupling sockets ISO 12,5
To the leader lie with a	Hydraulic drive circuit	Pressure in the filling branch min.130 bar–max.230 bar, 1 pc of quick coupler socket ISO 12,5
Tractor hydraulic system requirement		Pressure in the non-pressure return max.5 bar, 1pc of quick coupler socket ISO 20
	Lifting and lowering circuit of the preparation section	Circuit pressure min.190 bar – max.230 40 l/min., 2pcs of quick coupling sockets ISO 12,5
Tractor air system requirement (if the machine is equipped with brakes)	Machine axle braking circuit	Circuit pressure min.6 bar – max. 15 bar
Tractor electrical system requirement	Connection of the electronic system of the machine	12 V / 40 A + red – black

 Attach the machine to the lower arms of the tractor's rear TBZ using the TBZ hitch bar, and secure the TBZ arms with the anti-uncoupling pins.



No persons may be present in the are between tractor and the machine during connecting.



10.2 Hydraulics connection

- Only connect the hydraulic hoses of the machine when the hydraulic circuits of the machine and the tractor (unit) are depressurized.
- The hydraulic system is under high pressure.
- Regularly check all lines, hoses and fittings for leaks and obvious damage. Eliminate any
 defects immediately.
- When searching for and removing leaks, use only suitable aids, protective goggles and gloves are the basis.
- Use the plugs (on the machine) and sockets (on the tractor) of quick couplings of the same type to connect the machine hydraulic system to the tractor. Connect the quick couplings of the machine to the hydraulic circuits of the tractor according to the table below.

No. of circuit of tractor	Function	Coupler	Circuit color	Operation	Setting of oil flow I/min.	Continual flow
	Non- pressure return from hydromotors and lifting	ISO 20	0	Free flow to tank		√
1	Electrohy- draulic	ISO 12,5	0	Lifting	MAX	
1	control block	ISO 12,5	0	Lowering	MAX	
2	Flexi board (optional	ISO 12,5		Lifting	15 – 20	
2	equipment)	ISO 12,5		Lowering	15 – 20	
3	Fan	ISO 12,5	0	Pressure	20 – 40	PRIORITY
4	Fertilizing (optional equipment)	ISO 12,5	0	Pressure	15 – 20	√
5	Microdrill (optional equipment)	ISO 12,5	0	Pressure	15 – 20	√



To prevent involuntary or any stranger mistaken hydraulics movement, the control cabinets on the tractor must be secured or locked when not in use or in the transport position.





It is forbidden to disassemble parts of the machine hydraulic system that are under pressure. Hydraulic oil that penetrates the skin under high pressure causes of injury, seek medical advice immediately.



It is necessary to set 100% hydraulic oil flow for the hydraulic circuit (blue circuit).

10.3 Connection of the electronic part of the machine

- 1. Connection to the tractor battery + Müller terminal (10.3.1)
- 2. Machine connection via ISOBUS tractor socket + Müller terminal (10.3.2)
- 3. Machine connection via ISOBUS tractor socket + Tractor terminal (10.3.3)




10.3.1 Connection to tractor battery + Müller terminal


- The electronic unit of the machine only connect when the tractor is at standstill, secured against movement and against the intervention of strangers.
- Use the power cord supplied with the machine to connect the electronic unit. The connecting cable must be connected directly to the tractor battery!
- Place the terminal in the tractor in a place where it will not obstruct the driver's view and at the same time be in the operator's field of vision.
- Secure the wiring securely to prevent mechanical or thermal damage.
- To connection cable set contains a voltage relay, which is switched by a cable that is ideally attached to the ignition of the tractor, or to 12 V switched. This relay switches the communication between the machine control unit and the terminal.



- If welding is required on the machine or tractor disconnect the unit from the power supply and disconnect the connecting cables.
- Never replace the fuse with another object and always replace it with a fuse with the same fuse when replacing it.

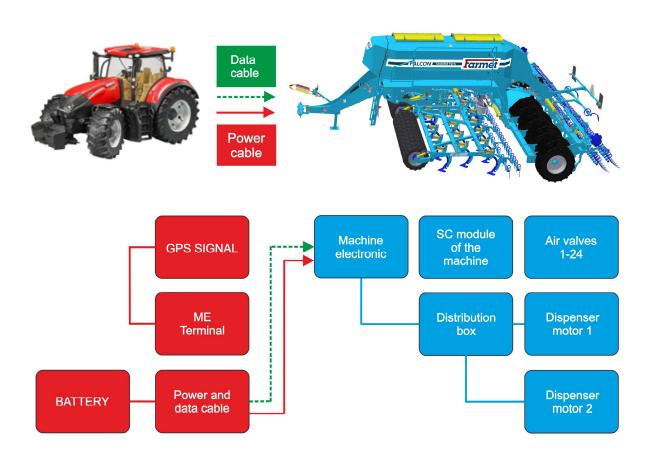




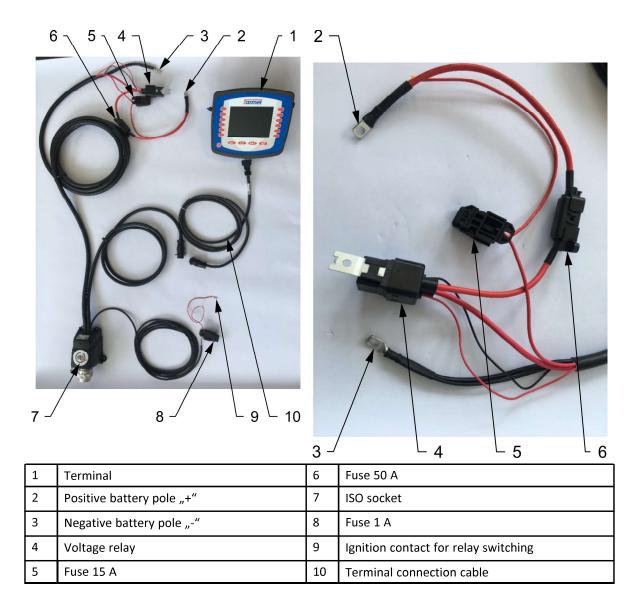



Due the disconnection of the unit from the battery, it is necessary to connect the ignition contact for closing the relay (9) to the ignition of the tractor, or to the switched 12 V (voltage 12 V switched by the key or switch).

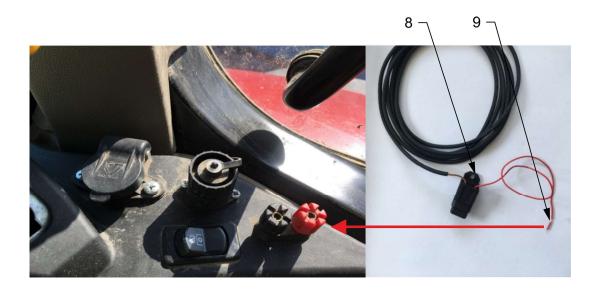




10.3.2 Connecting the machine via the ISOBUS socket of the tractor + Müller terminal

- Connect the machine plug to the ISOBUS socket of the tractor.
- Use the reduction cable of the terminal and connect to the IN-CAB socket of the tractor and connect the terminal.
- For this use it is necessary to set the terminal as VT 1, you can read this in the chapter VT a TC settings chapter- 10.3.4.



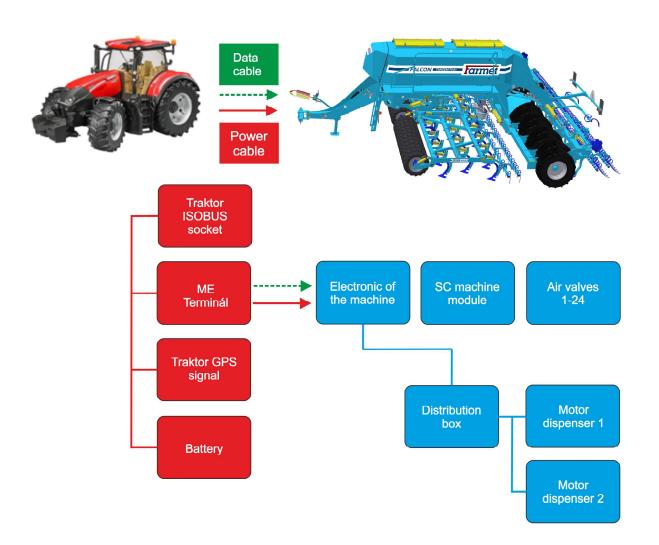




10.3.3 Connecting the machine via the tractor's ISOBUS socket + Tractor terminal

- Connect the machine plug to the tractor socket.
- ISOBUS VT must be switched on in the tractor settings.
- The machine application is loaded in the tractor ISOBUS application after 2-5 minutes (communication between the tractor and the machine must take place first).





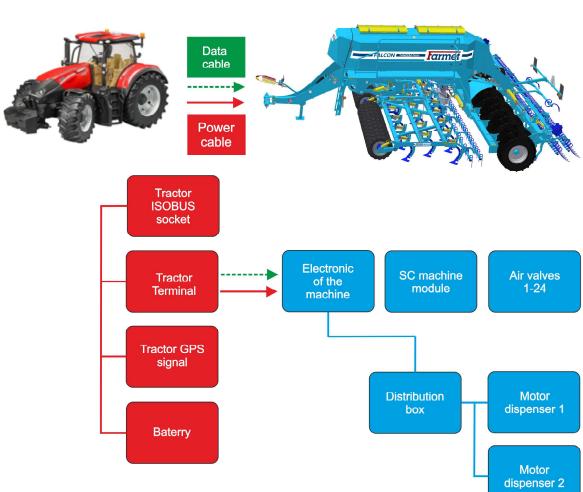




10.3.4 Selecting and setting up the virtual terminal (VT) and task manager (TC)

1.



Turn on the application

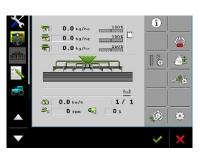


Touch




Basic


2.

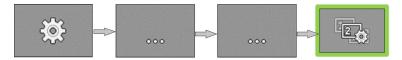

- 3. Select which virtual terminal you want to use (VT), for example Mueller or another terminal
 - For the basic terminal, it is necessary to select in the settings that it also work as a secondary terminal.

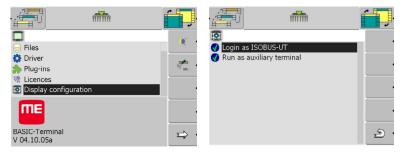

4. Select which task manager you want to use (TC), such as Mueller or other terminal

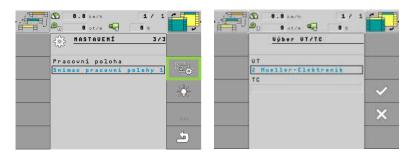

5.



Settings of virtual terminal and task manager is complete.




11 MACHINE FAN



- The hydraulic drive of the fan is driven directly from the tractor switchboard.
- It is necessary that the fan drive is connected to the tractor's priority circuit to ensure that the fan speed does not drop in any sense.
- The fan speed is set directly in the tractor by regulating the oil flow of the circuit.



• Replacing of the quick coupling for the non-pressure return with less than ISO 20 is unacceptable.

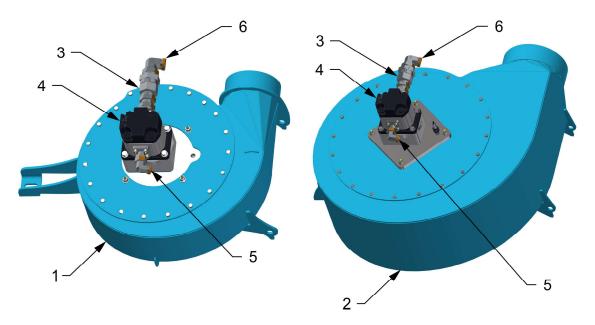

* See chapter 1 for your machine configuration.

1	Small fan V1	4	Hydraulic motor
2	Big fan V2	5	Pressure hose ISO 12,5 (P)
3	Reverse throttle valve	6	Non-pressure return ISO 20 (T)


	Hydraulic engine capacity	8 cm ³ /rev.	
	Big fan	Maximum speed	4000 (rev. /min.)
Hydraulic fan motor	DIG TAIT	Minimum speed	1000 (rev. /min.)
	Const for a	Maximum speed	4500 (rev. /min.)
	Smal fan	Minimum speed	1000 (rev. /min.)
Pressure branch (P)	Minimum pressure in the	130 (bar)	
Fressure branch (F)	Maximum pressure flow i	50 (I/min.)	
Non-pressure return (T)	Maximum pressure in the	5 (bar)	





In case, if free waste is not fitted to the tank as standard on the tractor, contact the tractor manufacturer (dealer), who will provide you with information on the options for the free waste terminal.

Hydraulic connection of the fan drive

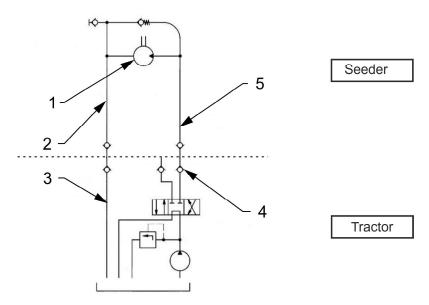


1	1 Fan hydraulic motor		Quick coupler of tractor switchboard
2	Non-pressure return ISO 20 (T)	5	Pressure hose 12,5 (P)
3	Non-pressure return in the tractor tank		



Farmet a.s. is not liable for damage to the hydraulic drive or tractor caused by incorrect connection of the hydraulic drive.



11.1 Fan with separate drive on PTO

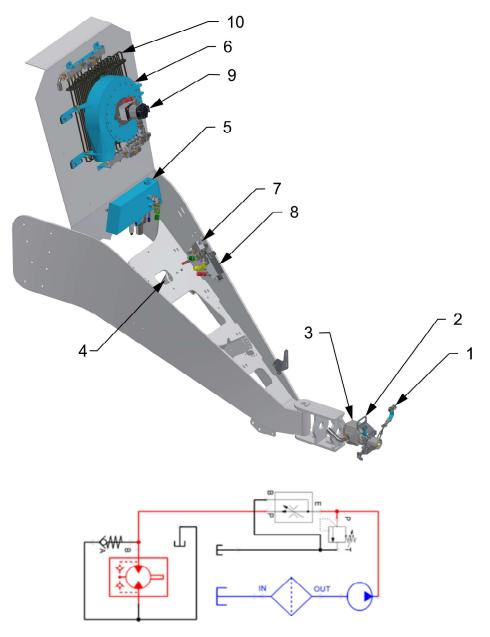

1	Generator locking screw	6	Ventilator
2	Handling handle	7	Safety valve
3	Hydraulic generator	8	Fan speed reducing valve
4	Low pressure oil filter	9	Hydraulic fan motor
5	Oil tank	10	Oil cooler



- Securing the hydraulic generator against rotation with chains.
- Always use the PTO fan set to 540 rpm.



Methods to set the fan speed:

- 1. Connect the hydraulic generator (3) to the tractor PTO.
- 2. Set the working speed on the tractor (540 rpm).
- **3.** Use the reducing valve (8) to set the required fan speed.
- **4.** Check the speed on the machine monitor.
- If the machine is equipped with an oil cooler, it is necessary to clean it, see Maintenance plan
- The oil cooler is located under the dump fan at the front of the hopper.

11.2 Fan speed setting according to seed



If the machine is equipped with a fertilization chamber and no fertilization is required, the air supply for the fertilization branch can be closed using the valve behind the fan as described in Chapter 11.3




NThe air flow should not be too strong as it may blow out the seeds or the fertilizer from the seeding row. When the air flow is too weak, there is a risk of insufficient stream of seeds through the hoses which may cause clogging, so pay attention to the proper setting of the fan speed according to the table below.

	Table for setting the fan speed				
	rapeseed, clover, grass	cereals	soya, lupine	legumes	
Seed rate	1 – 50 kg	50 – 180 kg	50 – 180 kg	180 – 350 kg	
no supplementary fertilization valve behind the fan fully closed	1 500 – 2 500	2 500 – 3 500	2 500 – 3 500	3 000 – 4 000	
1 - 50 kg fertiliser, valve behind the fan fully opened	2 500 – 3 000	2 500 – 3 500	2 500 – 3 500	3 000 – 4 000	
50 - 180 kg fertiliser, valve behind the fan fully opened	2 500 – 3 500	2 500 – 3 500	2 500 – 3 500	3 000 – 4 000	
180 - 350 kg fertiliser, valve behind the fan fully opened	3 000 – 4 000	3 000 – 4 000	3 000 – 4 000	3 000 – 4 000	



11.3 Fertilizing air control valve

- The position of lever 1 can be used to set the amount of air that flows into each branch.
- Position 2 means that the air flow to the branch is fully closed.
- Position 3 means that the air flow to the branch is fully open.

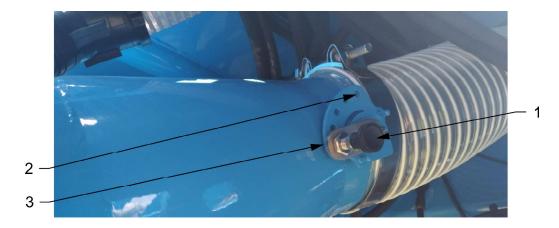


	1	Valve locking pin	3	Maximum valve opening
ſ	2	Closed valve		



12 ADJUSTING THE LONGITUDINAL AND TRANSVERSE PLANES OF THE MACHINE

12.1 Longitudinal plane of the machine

• Using the three-point hitch of the tractor, set the plane of the machine with the soil to ensure the same depth of soil cultivation both in the front and at the back of the machine.

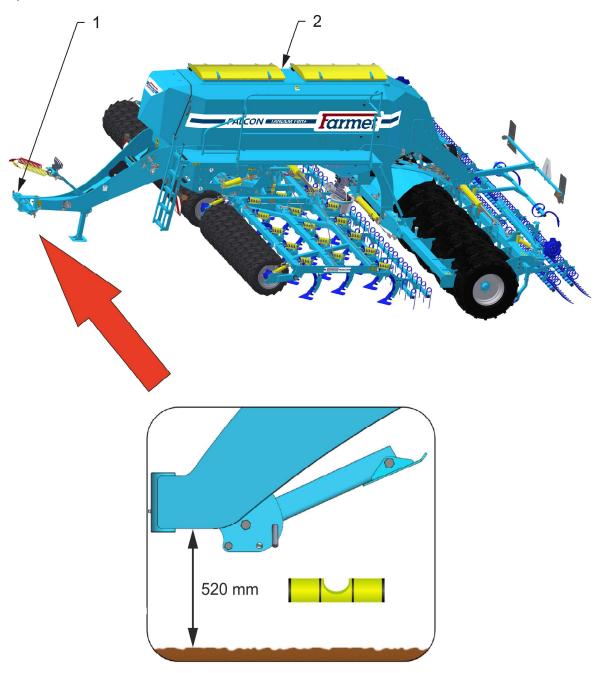


- 1 Tractor TBZ arm
- 2 Tractor TBZ arm Machine hopper level with the ground



12.2 Transverse plane of the machine


• The transverse plane is adjusted using the hydraulic piston rods; loosen two M12 bolts (pos. 2) and turn the piston rods (pos. 1) to adjust the transverse plane.



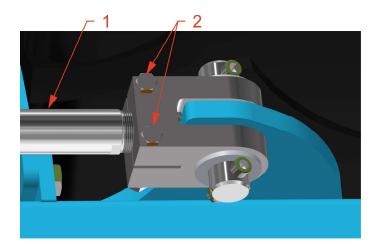



13 SETTING THE HARROW AFTER THE SEEDING SHARE SECTION

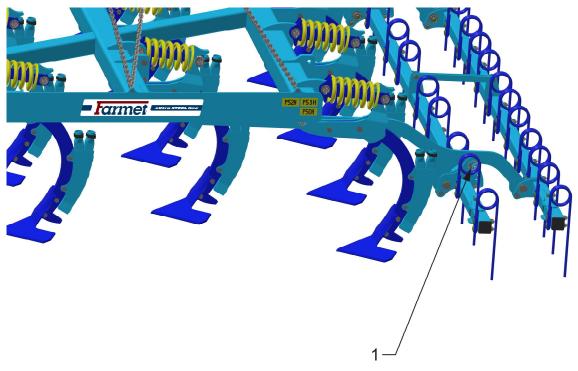


1 – Pin for inclination setting



14 ADJUSTING THE HARROW AFTER THE RUBBER-TYRED PACKER

• Detrás del pisón neumático se ajustan raspadores de las ruedas e inclinación de las rastras.

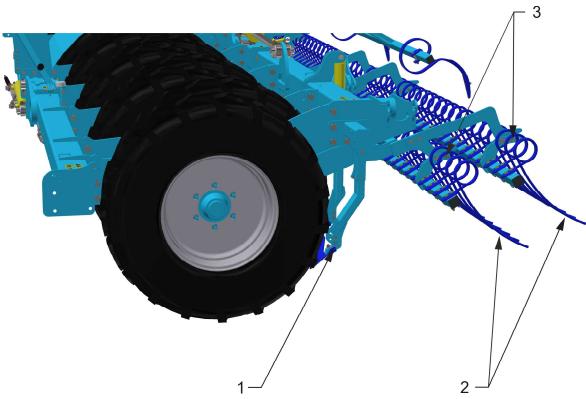


1	Scraper
2	Levelling bar
3	Pin for inclination setting



15 PRESSURE SYSTEM OF THE MACHINE



It is necessary to check the leakage of compressed air, especially around the tank lid.

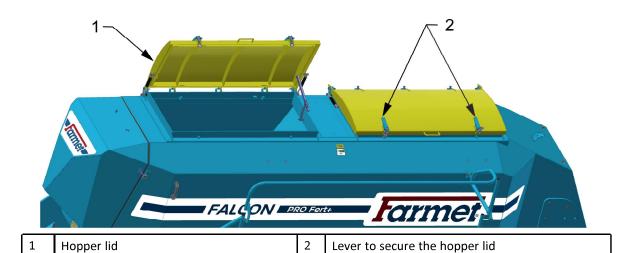




16 SOWING OFF

- The sowing is switched off by a pressure sensor, which is located on the hydraulic circuit for raising the seed section.
- The sensitivity of this sensor is set to a pressure of 100 Bar.
- When excavating the machine, oil pressure is supplied to the hydraulic distributor, when the set value is reached, the switch is closed and the motors of the seed and fertilizer metering units are deactivated.



- For this reason, move the hydraulic control lever to the float position after deepening the machine into the working position!
- The sensitivity of the pressure and antenna sensor is set by the manufacturer as standard. Settings may only be changed by a specialist.



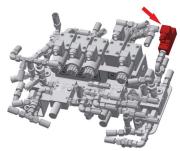






17 ELECTRONIC MACHINE CONTROL MÜLLER ELECTRONIC


• The electronic system controls all functions that are connected to the blue hydraulic circuit.

17.1 Work screen

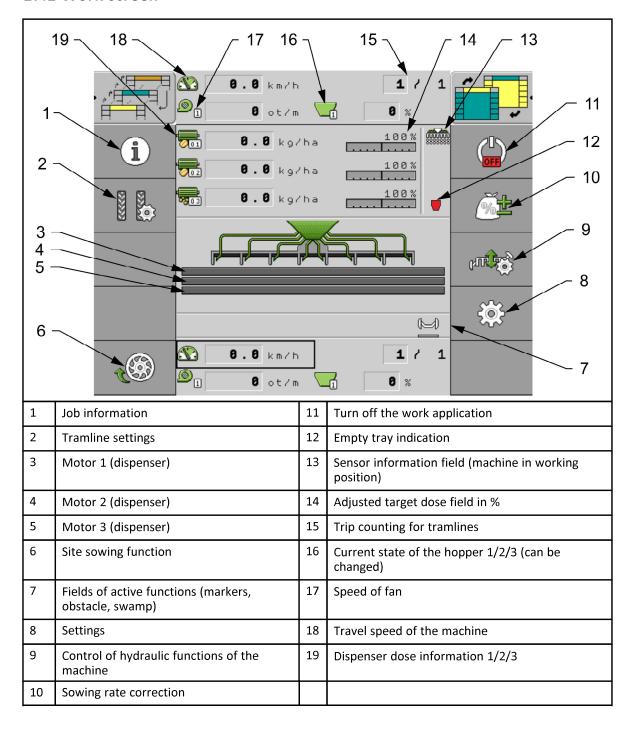



	Beacon is activated		Both markers activated manually
	Hopper lights are activated		Manually activated left marker
()	Working light is activated	Ŋ	Manually activated right marker
	Function swamp is activated	I	Markers are deactivated
•	The dispensers are filled with seed		Automatic markers (first left)
888	ISOBUS-TC is activated	<u> </u>	Automatic markers (first right)
St.	Section-Control is activated, including GPS		Obstacle function
	Hopper is empty		Working speed of the machine
	Machine is in working position	SHAKKK S	A tramline is being created
	An earlier engine stop is activated		Calculated system pressure

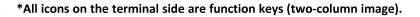






17.2 Information

1.

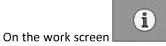

Function icon	Meaning
\(\tau_{\text{\tin}\text{\tetx{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\ti}\}\text{\tetx{\text{\text{\text{\texi}\text{\text{\texi}\text{\text{\text{\ti}\text{\text{\text{\text{\text{\texi}\tint{\text{\ti}\ti}\text{\texit{\texi}\text{\texi}\text{\texit{\texi}\text{\texi}\t	Resetting the daily counter
Σ=	Counter summary information
	Task list (TASK)
i	Total stack counter

- Area The area on which the machine was in the working position
- Quantity Applied amount
- Area performance Applied area per hour

2.



- Counter summary information
- Operating hours Period time for which the computer is turned on
- Total hours Period time, which the machine was working for
- Total distance Worked distance
- Total area Worked area
- Area performance Applied area per hour



17.3 Creating a task with a computer


 This function allows you to create an order, for an overview of information about the work performed.

1.



- Order Select an existing one or create a new task
- Rename Here you can name the order
- Product Here we assign the product (MOTOR / SEED / FERT).

2.

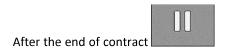

3.




It is possible to reset the counter

17.4 Remaining calculated amount in the hopper

 On the screen Results / The hopper will see counters that show the amount remaining in the hopper and how much work can still be done with the remaining contents of the hopper.

1.

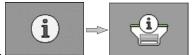

On the working screen .

- **Leftover amount** Remaining sum in the hopper.
- Leftover area OArea where you can still work with the remaining sum in the hopper.
- Leftover track The distance that can still be traveled with the remaining sum in the hopper.

2.



Use to return to the work screen



17.5 Unfolding and folding the machine

 The blue hydraulic circuit of the machine must be connected to the double-acting hydraulic circuit of the tractor.



• The operator must ensure that when folding or unfolding the side frames, no person or animal is within their reach (means at the point of impact) or in the near area and that no one pushes their fingers or other parts of the body into the joint space.



Folding or unfolding the machine at rest, on level and standstill surfaces.

- Remove adhering dirt on the folding frames, especially around the joints, end valves, stops and secured sections. The dirt can prevent folding, unfolding or mechanical damage.
- While folding and unfolding, check the side frames and let them smoothly to the end of position.




17.6 GPS settings for machines when unfolding in the hall


For service purposes of the machine in the hall, it is necessary to set the simulated speed to 0 km/h when unfolding the machine in the hall.

1. Turn off the application




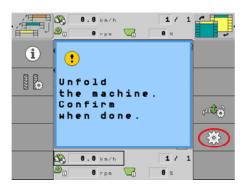

2.

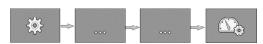




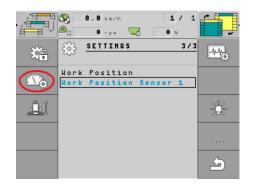

3.





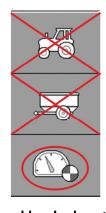



Set the speed source to 0 km/h! Switch back to the workload when the machine is fully deployed.




17.7 Unfolding the machine

1.	Before unfolding the machine it is necessary to unlock the side frames on the front preparation section. This locking is hydraulic (unlocks automatically).					
	HYDRAULIC SECURITY					
2.	Opening the blue ball valve (It must remain open during work).					
3.	All sections of the machine must be in the raised position (antenna sensor closed)					
4.	Hydraulic control					
5.	Switch on folding					
6.	Apply pressure to					
7.	Confirm after complete unfolding					
8.	Apply pressure to To lift a rear section					



17.8 Folding the machine

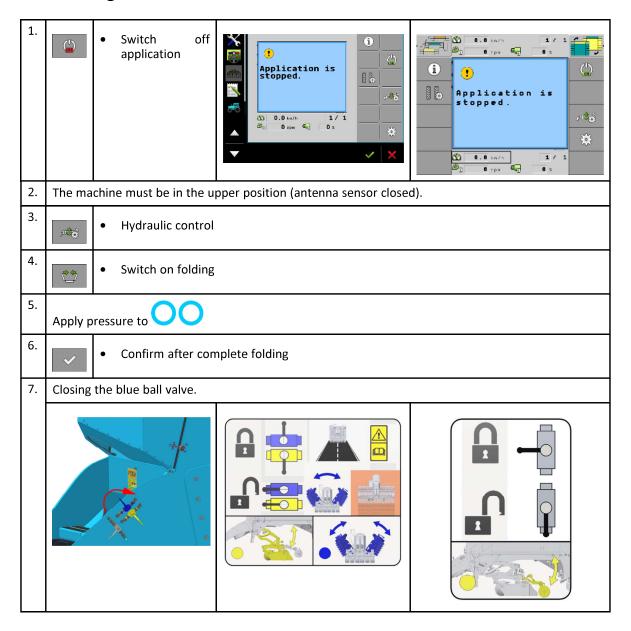




17.9 Control and settings of the markers

- The markers are adjustable only to the center of the tractor, they copy the terrain, each track marker can be controlled separately and they are hydraulically tiltable.
- The distance of engagement of the marker disc is always measured from the center of the seed coulter. The markers must be set to the correct length in the field.




The markers are only activated when the machine is in the working position

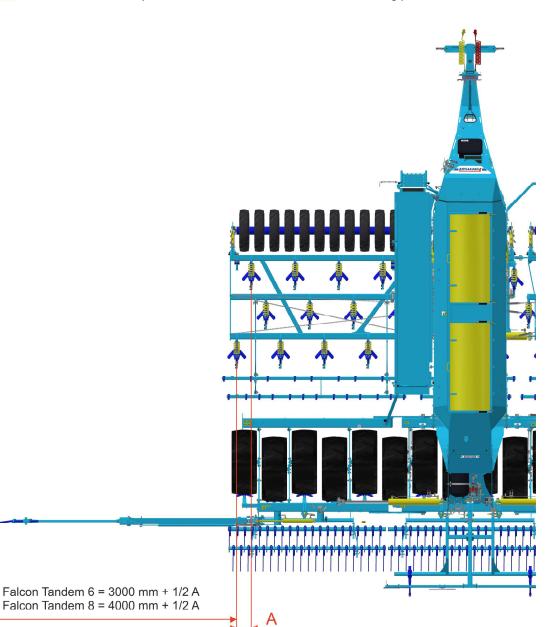



17.9.1 Settings of aggressivity of the markers

- Adjust the aggressivity of the markers depending on the soil conditions.
- 1. Loosen the hexagonal screws (1)

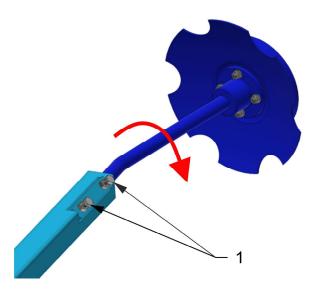

1 – Hexagonal safety screws

- 2. Adjust the marker and retighten the hexagonal screws.
- 3. Check the quality of the work of the markers and adjust the marker settings if necessary.



17.9.2 The markers control

1.



Turn on application

the

Touch







2.



Hydraulic control

3.



The markers control

Function icon	Meaning
	Control of the left marker only
	Deactivate marker control
	Obstacle function- the hydraulics only control the marker without the rear sowing section
	Control of both markers at the same time
	Control of the right marker only
	Automatic change of the marker when the seeding section is raised
	Manual marker change in automatic mode

4.

After selecting the function, apply pressure to



The markers are controlled by a blue hydraulic circuit at the same time as the sowing section.





17.9.3 Obstacle function


• If the obstacle function is activated, the hydraulic circuit only controls the markers and the sowing section is still in the working position







The activated obstacle function is displayed on the work screen

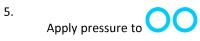

6. Detour the obstacle and then apply pressure

7. Deactivation of an obstacle




17.9.4 Swamp function

The swamp function is used to raise the sowing section, without cancelling the sowing. 1. The machine must be in working position 2. Hydraulic control 3. Activate function swamp 4. The activated swamp function is displayed on the work screen 5. sowing section is lifting but the machine is still working 6. sowing section is deepens Apply pressure to 7. Deactivation of the swamp function and the




17.10 Enter the hopper fill

• The system allows the calculation of the tank status in real time, based on a calibration test. This function is not necessary for the correct operation of the machine.

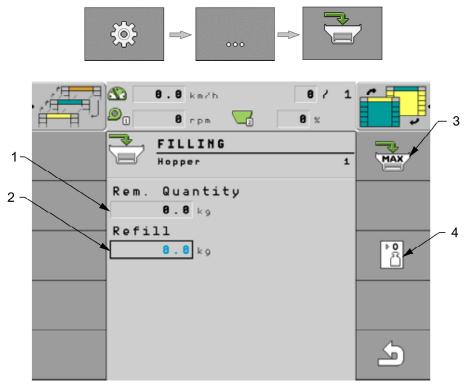

1	Current residual amount in the hopper		Maximum filling of the tank
2	Write the quantity poured into the hopper here	4	Resetting the state in the hopper

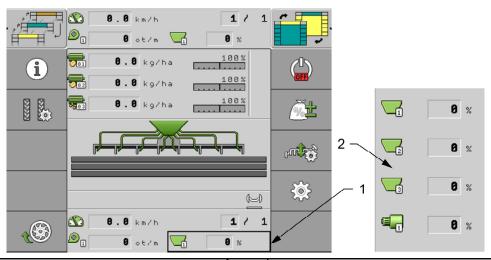

Hopper 1 status indicator in % based on sowing test

Open menu of real-time values (choose which ones I currently want to display)



17.11 User product database


1.



• Shutting down the application



Touch

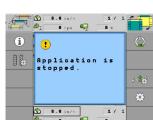

Basic

2.



Product

 Here I choose which motor I want to modify (motor 1/2/3, nebo Seed/Fertilizer) according to the machine configuration.

Rename

• Here you can rename the product.

Type of product

• For the engine, select the product type seed / solid fertilizer / liquid fertilizer / undefined.

Note

• Here you can enter any note, for example MARGED.

Adapt

 Here it is possible to set a percentage value by which the required dose value can be changed manually during work.

Example: 1 x press by 10%, 2 x press by 20%

Gear ratio

• If there is a gear behind the outlet shaft motor, it must be entered here. The motor shaft speed is entered first and then the metering unit speed.

Example: 2 rev. motor / 1 rev. dispenser

Level alarm

Low / Empty – Only if two sensors are used one above the other for one dispenser.

Empty – In case of using one sensor for the dispenser.

Deactivate – To deactivate the dispenser sensor.



Deviation tolerance

- For each motor, enter the deviation from the required dose above which an alarm should be triggered.
- For a precision seed machine the deviation tolerance applies to each row.
- The left value applies to the upward deviation and the right value to the downward deviation.




17.12 Assignment of the motor to the given hopper


Touch Basic

1.

Shutting down the application



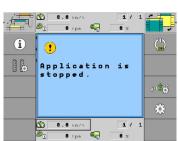

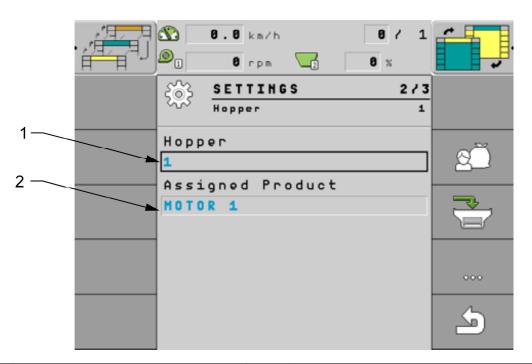

1 Settings of hopper 1 / motor 1 2 Assigned product from the product database



17.13 Activation / Deactivation dispenser

• This function is used to deactivate the metering motor, which we do not want too use during work (sowing with one metering unit, deactivation of fertilization).




2. Select the product (dispenser) that you want to deactivate by pressing on its name (MOTOR 1)



3.



• Deactivation / Activation

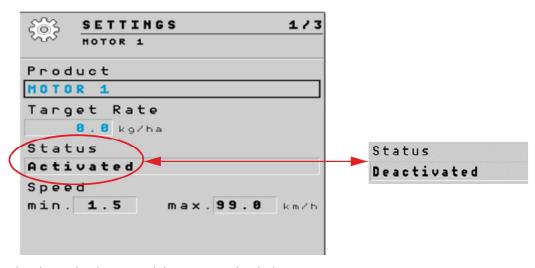

4. This shows the deactivated dispenser on the desktop.



• After switching the terminal off and on again, the dispenser is always reset (activated).



17.14 Seed flow sensing Dickey-John-deactivation

Touch Basic

Shutting down the application

Shutting down the application is stopped.

Application is stopped.





SETTINGS

Implement

DICKEY-john Blockage M.

Yes

4. No Yes

- 5. Seed flow sensing deactivated.
- 6. To reactivate the sensors, select YES.




17.15 Acoustic Signal When Seeding Is Interrupted

Touch



Turning off the application



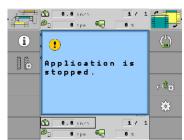

Basic

- The system is equipped with acoustic signalization in case one of the seeding conditions is not met
- The working conditions include:


Activated application

Fan speed over 1,000 RPM.

Information on the speed from the GPS sensor

Active working position of the seed drill

When any of the conditions is not met, the machine does not seed and the operator is notified by an
acoustic signal.

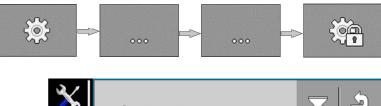



1	Signalling on/off
2	Signalling activation delay
3	Dickey-john sensor setting, see chapter 17.14




18 RAIL LINES



• Rail lines settings.

Func- tional icon	Meaning
52253 52253	Adds driving. E.g.to set the number of rides correctly after returning to the field. This function is only available when the machine is stopped and not in the working position.
EXXXXI EXXXXI	Subtract the ride. E.g. To set the number of rides correctly after returning to the field. This function is only available when the machine is stopped and not in the working position.
23.23 23.23	Deactivation the automatic addition of trips. If the tramline counting is stopped, the machine will do the tramline continuously.
נגנגנס	Opens the screen for setting the tramline rhythm.

18.1 Rail lines set on and off

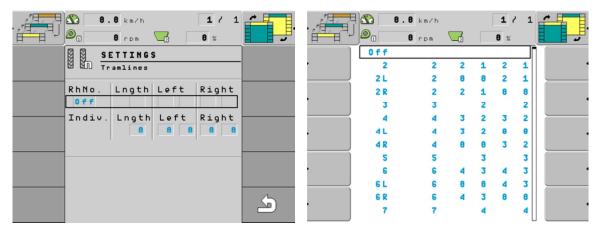

RhNo.	Program number
Length	The period when the cycles start to repeat
Left, Right	Specifies the travel in which the tramline on the left or right side of the machine is activated
Individual settings	Here we can choose our own settings



18.2 Steps for setting the tramline rhythm correctly

Necessary information for calculating the rhythm of tramlines.

- 1. Seeder grip
- 2. Sprayer grip

We will perform calculation

Result of the calculation = Sprayer grip / Seeder grip

Possibilities of creating tramlines

- 1. Even results Even tramline rhythms (15.2.1)
- 2. Odd result Odd tramline rhythms (15.2.2)
- 3. Decimal results Special tramline rhythms (15.2.3)


Types of valves placement on the machine	
	 TYP A One valve on each side of the machine
or	 TYP B One valve on one side of the machine
or	TYP C Two valves on one side of the machine
or	 TYP D One valve on one side of the machine and two valves on the other side of the machine
	TYP E Two valves on each side of the machine and each side of the machine create a complete rail line for the entire sprayer (2 tracks)



18.2.1 Even tramline rhythms

- It is possible to create an even tramline during one or two runs.
- 1. During one run, tramlines are created on both sides of the machine
- 2. During two runs, tramlines are created, the valve is located only on one side of the machine
- **3.** During one run, tramlines are created, both valves are on one side of the machine

Example: Creating a tramline on both sides of the machine at the same time.

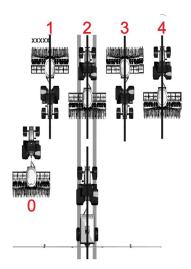

- The example shows a 4s rhythm
- Rail lines are created in two runs (sprayer 12 m, seeder 3 m)
- Run 0 must be done separately
- For run 0 trip counting must be deactivated



Creating a tramline in one run TYPE A

Possible valve positions	Result of the calculation	RhNo.	The resulting rhythm	Left valves				Right	valves
	2	2 s	2		1		1		
	4	4 s	4		2		2		
	6	6 s	6		3		3		
9-8	8	8 s	8		4		4		
	10	10 s	10		5		5		
	12	12 s	12		6		6		
9-18	14	14 s	14		7		7		

Start sowing from the left side of the TYPE B field


Possible valve positions	Result of the calculation	RhNo.	The resulting rhythm	Left valves		Right	valves
	2	2 L	2			2	1
	4	4 L	4	3	2		
	6	6 L	6			4	3
	8	8 L	8	5	4		
	10	10 L	10			6	5
	12	12 L	12	7	6		
	14	14 L	14			8	7



Start sowing from the right side of the TYPE B field

Possible valve positions	Result of the calculation	RhNo.	The resulting rhythm	Left valves		Right valves	
	2	2 P	2	2	1		
	4	4 P	4			3	2
	6	6 P	6	4	3		
	8	8 P	8			5	4
	10	10 P	10	6	5		
	12	12 P	12			7	6
	14	14 P	14	8	7		

Example: Creating a tramline on one side of the machine on which are both valves

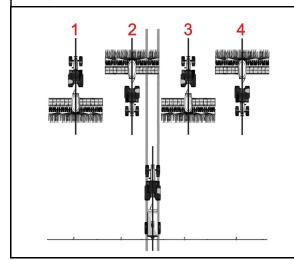

- The example shows an individual rhythm
- Rail lines are created in two runs (sprayer 24 m, seeder 6 m)



Start of sowing from the left side of the field, individual rhythm TYPE C/E

Possible valve positions	Result of the calculation	RhNo.	The resulting rhythm	Left valves		Right	valves
1,5m 1,5m							
9 : 9 9 : 9 1,875ml 1,875m	2	999	2				1
2,25m 2,25m							
1,5m 1,5m							
3 : 3	4	999	4		2		
2m 2m	7	333	7		2		
2,25m 2,25m							
1,5m 1,5m	6	999	6				3

Start of sowing from the right side of the field, individual rhythm TYPE C/E


Possible valve positions	Result of the calculation	RhNo.	The resulting rhythm	Left valves		Right valves	
1,5m 1,5m							
1,875ml 1,875m	2	999	2		1		
2,25m 2,25m							
1,5m 1,5m							
9 : 8	4	999	4				2
2m 2m	, i	333	, '				-
2,25m 2,25m							
1,5m 1,5m	6	999	6		3		



18.2.2 Odd rhythms of tramlines

 Odd tramline rhythms are always created in one run. Odd tramline can only be created if the valves are on both sides of the machine.

Example: Creating a tramline one in one run

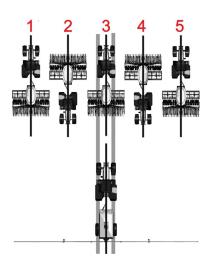

- The example shows rhythm number 5
- The tramlines are created in the third run (sprayer 15m, seeder 3m)

Creating a tramline in one run TYPE A


Possible valve positions	Result of the calculation	RhNo.	The resulting rhythm	Left valves		Right valves	
	3	3	3		2		2
	5	5	5		3		3
	7	7	7		4		4
9-8	9	9	9		5		5
	11	11	11		6		6



18.2.3 Special tramline rhythms

- Special rhythms are always created during four runs, they can only be created if the tramline valves are arranged on both sides of the machine.
- One tramline valve is on one side and two valves are on the other side of the machine.

Example: Creating a tramline with a special rhythm.

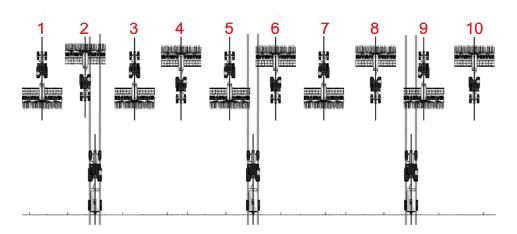

- The example shows rhythm number 20
- Rail lines are created during runs 2, 5, 6 and 9 (sprayer 20 m, seeder 6 m)



Start of sowing from the left side of the TYPE C/D/E field

Possible valve positions	Result of the calculation	RhNo.	The resulting rhythm	Left valve		Right valve	
1,5m	1,33	999	4	3	2	1	4
	1,5	22	6	4	3	6	1
4,5m 4,5m	1,0	22	Ü	-		Ü	1
1,5m 1,5m							
1,8m 1,8m	2,5	16	10	7	4	9	2
2m 2m	2,3	10		·	·		_
3m 3m							
	2,67	62 L	8	5	4	7	2
1,5m	·						
######################################							
2 : 2 1,5m	3,33	20	10	9	2	6	5
22m							



Possible valve positions	Result of the calculation	RhNo.	The resulting rhythm	Left valve		Right valve	
1,5m 1,5m	3,5	28	14	13	2	9	6
2m 2m	ŕ						_
m m m m m m m m m m m m m m m m m m m							
1,5m 1,5m	4,5	18	18	16	3	12	7
2m 2m							
	4,67	63 L	14	3	12	7	8
	5,33	24	16	9	8	14	3
3 1,5m 1,5m	5,5	65 L	22	14	9	3	20
0,5m	6,67	64 L	20	10	11	4	17
	5,57	04 L	20	10	11	۲	17
3 : 2 : 2 : 2 : 2 : 2 : 3 : 3 : 3 : 3 :	7,5	30	30	27	4	19	12
1,5m 1,5m							
	9,33	999	28	14	15	5	24



Start of sowing from the right side of the field TYPE C/D/E

Possible valve positions	Result of the calculation	RhNo.	The resulting rhythm	Left valve		Right valve	
2 1,5m	1,33	999	4	1	4	3	2
3m 3m	1,5	23	6	6	1	4	3
4,5m 4,5m							
9 : 8 : 8 : 8 : 8 : 8 : 8 : 8 : 8 : 8 :							
1,8m 1,8m	2,5	15	10	9	2	7	4
2m 2m	-),				_		
3m 3m							




Possible valve positions	Result of the calculation	RhNo.	The resulting rhythm	Left v	/alves	Right valves	
	2,67	62 R	8	7	2	5	4
	3,33	21	10	6	5	9	2
	3,5	29	14	9	6	13	2
	4,5	19	18	12	7	16	3
	4,67	63 R	14	7	8	3	12
	5,33	25	16	14	3	9	8
3 : 3 : 3 : 3 : 3 : 3 : 3 : 3 : 3 : 3 :	5,5	65 R	22	3	20	14	9
	6,67	64 R	20	4	17	10	11
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	7,5	31	30	19	12	27	4
9	9,33	999	28	5	24	14	15



18.3 The most frequently used tramline settings

The specific tramline setting is done in the tramline setting screen itself. For a better orientation and understanding of the setting of the tramlines, we present graphic and tabular processing here. The system for determining the rhythm of the tramlines follows from the graphic representation and the table

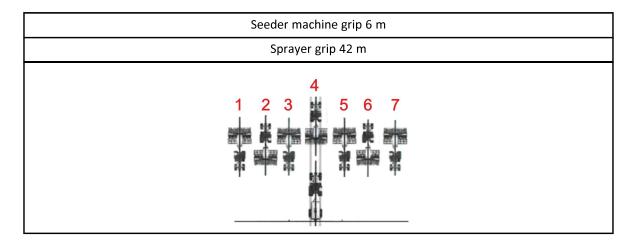


Grip of the machine (m)	Grip of the sprayer (m)	Program (Number of line)	Number of rides per machine width (length)	Left	Right
6	18	3	3	2	2
6	30	5	5	3	3
6	42	7	7	4	4
8	24	3	3	2	2
8	40	5	5	3	3



18.4 Rail line valves



- The tramline valves are closed with compressed air. It is necessary to have a red air hose connected to the compressed air connection from the tractor.
- For valves, it is important that no pressure escapes anywhere in the entire system.
- The pressure reducing valve must be set to 0,2 MPa.
- Check the valve drip tray.
- When the valve is running, the red signal light on the switchboard must always be on.

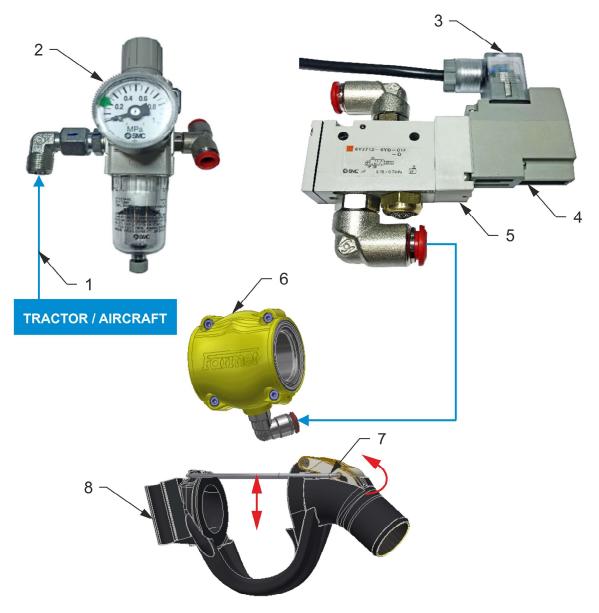

1	Compressed air supply from the tractor	5	Air distributor
2	Air pressure reducing valve	6	Air valve
3	Connector with red signal light	7	Secure locking lever valve
4	Switchboard solenoid	8	Body of air valve



18.5 Air pressure reducing valve of the tramlines

- The air pressure reducing valve is located on the seed drill head holder.
 - 1. Slide out (upwards) the valve adjustment segment.
 - 2. Tighten to add pressure.
 - 3. Release to reduce pressure.
 - **4.** After setting the required pressure of **0,2 MPA**, slide in the adjusting segment (downwards).






THE PRESSURE MUST ALWAYS BE SET TO 0,2 MPA.



18.6 Tramline markers

- The tramline markers are automatically controlled together with the tramline valves.
- The tramline markers can be deactivated using the ball valve on the rear target holder.




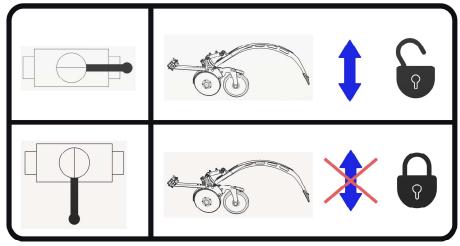




19 FARMET DISPENSER

• Dispenser with roller change system.

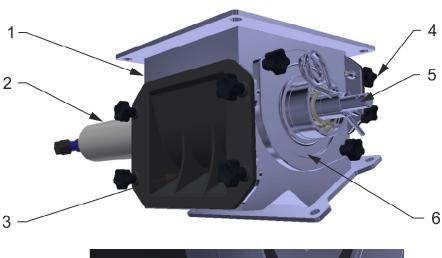

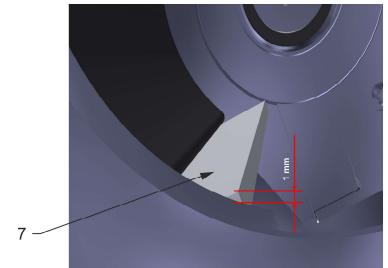

1	Body of Farmet dispenser	5	Dispenser shaft
2	Drive motor	6	Side cover with roller mounting
3	Dispenser front with bottom trowel	7	Lower roller trowel
4	Dispenser front with top trowel		



It is necessary to check both trowels of the dispenser rollers every day before work Any sign of deformation and loss of trowel material can lead to inaccurate dose requirements. The trowel can be rotated and used from the other side. In case of damage to both sides, we recommend purchasing a new part.

The trowel must extend 1-2mm beyond the edge of the circular opening of the dispenser.



PBefore each use while standing, it is necessary to check the cleanliness of the roller and the dispenser. The roller must rotate freely in the metering unit. If dispenser gets stuck, there is a risk of breaking the fuse of the dispenser motor.




19.1 Dispenser function test

- 1. After installing a new roller, the function, centering and smooth running must be checked.
- **2.** To start the roller, use the metering fill function or the sowing test.
- **3.** The drive motor must run evenly "smoothly".
- **4.** Check clutch centering. If running unevenly, the dosing is inaccurate and the motor can be overloaded.
- **5.** At the point where the roller cuts, repair them, they must be reground or returned.
- **6.** Loosen the screws on the side covers for the drive motor and roller bearing, and realign the side covers to prevent stress.
- **7.** If the drive shaft is bent, it must be aligned or replaced.
- **8.** If foreign bodies are stuck between the roller and the metering housing, they must be removed.
- **9.** If there is dust or mordant in the roller between the metering discs and the spacer roller, disassemble and clean the roller.



19.2 Rough seeds

- For sowing rough seeds (corn, beans. peas, etc.) it is necessary to adjust the metering unit.
- The deflector (1) prevents large seeds from getting stuck between the metering cover and the roller. Failure to install the deflector could damage the roller, metering unit, or motor.
- For very large grains, a large seed adapter (2) can be fitted. This makes it easier for large grains to enter the dispenser and prevents grain damage.
- If necessary, add talc or graphite powder to the seed. Some types of large seeds do not spread well and may not completely fill the roller holes.

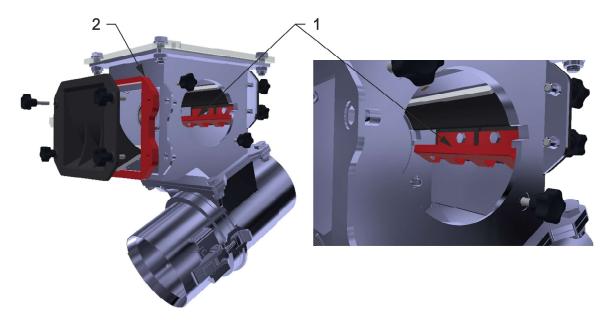

1	Deflector for large seeds	2	Adapter for large seeds
---	---------------------------	---	-------------------------





- When using the adapter for large seeds, it is necessary to use longer fixing screws L= 30 mm (accessories of the adapter frame).
- Deflector set with an adapter for large seeds is part of the machine accessories.




19.3 Roller replacement

- After selecting the roller according to the table, the roller must be mounted in the metering unit.
 - 1. With the full hopper, slide the slider over the dispenser (9).
 - 2. Remove the screws (6) on the side cover of the metering roller (1).
 - 3. Remove the roller (3) with drive shaft (5) and the side lid (1).
 - 4. Remove the cotter pin (7).
 - **5.** Remove the secure ring (2) and cover washers (4).
 - **6.** Pull out the shaft (5) roller and mount it on a new roller. Keep the washers (4) on both sides of the roller!
 - **7.** Secure the roller (3) with secure rings (2).
 - 8. Insert the roller (3) into the dispenser.
 - **9.** Replace the side cover (1) and tighten the screws (6).
 - **10.** Secure with a cotter pin (7) (the first hole on the shaft).
 - 11. Pull out the slider (8) and secure him to be sure that dispenser seals.
- After each roller change, the trowel settings and the centered operation of the roller must be checked.

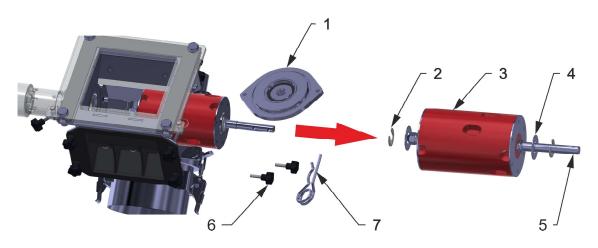

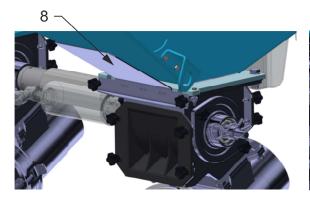


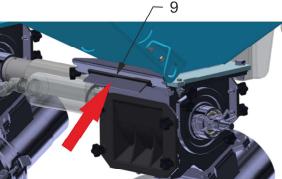

1	Side cover of the dosing roller	6	Screws
2	Secure ring	7	Cotter pin
3	Dosing roller	8	Closing slider in open position
4	Cover pad	9	Closing slider in closed position
5	Dosing roller shaft		




The cover washers (4) must be arranged so that the roller in the middle of the dispenser frame after assembly. See picture below.

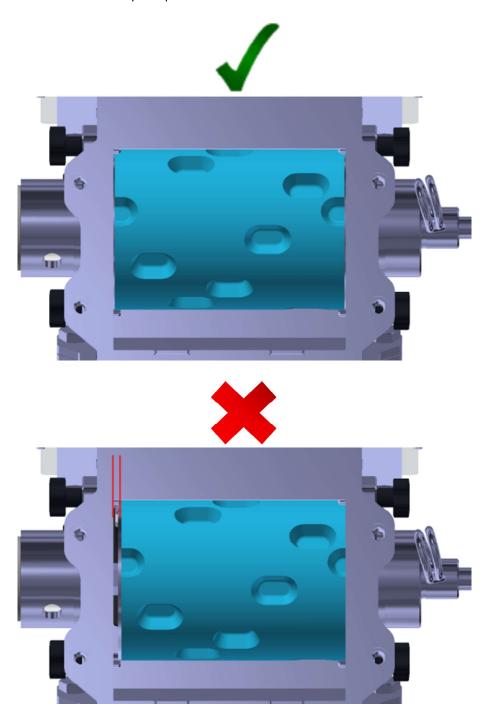




19.4 Rollers for fine seeds

- The fine seed rollers consist of metering discs, spacer rollers and a drive shaft.
- The rollers can be mounted with one or two dosing discs.
- With the two dosing discs on the roller, the spread rate is doubled.
- The dosing disc is available with a dosing volume 3,5 cm³, 9 cm³.
- When sowing, only the metering discs in the roller rotate. The spacer cylinders are blocked stops on the housing.
- When assembling and disassembling the rollers, the screws (2) must be turned into the recess (10) in the dispenser body.

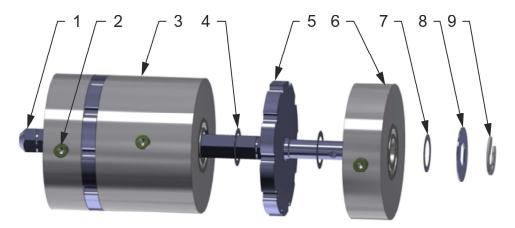

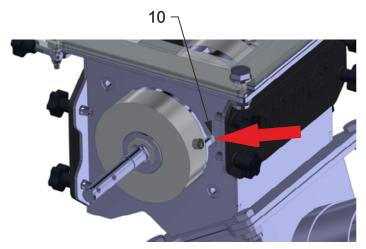

1	Roller shaft	6	Roller bearing
2	Anti-rotation screw (locking screw)	7	Spacer washer 0,2 mm
3	Spacer washer with lock	8	Cover washer 1 mm
4	Spacer washer 0,1mm	9	Secure ring
5	Dosing disc	10	Hole for locking screw (dispenser selection)




20 SOWING TEST


20.1 Hose distribution type



Before the sowing test, it is necessary to know the type of hose distribution. *See chapter
 1 for your machine configuration.

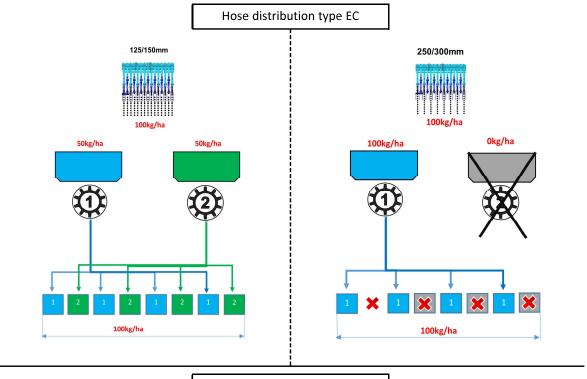

Hose distribution type HM

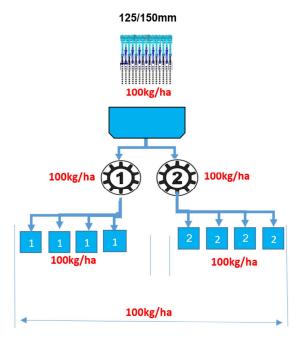



20.2 Sowing test



- 1. You will need the designated accessories to perform the calibration test.
 - Scale
 - Bucket
 - Sowing table
- 2. Select the correct roller for the roller metering unit based on the sowing table - Chapter 20.3
- 3. Check the cleanliness of the dispenser, roller and trowel condition.
 - The trowel must reach on the roller chapter 19

Touch

4.

5.

8.



Turn application

Settings

the





Basic

6. Select the Product for which you want to calibrate.





7. Calibration

Select Dispenser, which you want calibrate 1 / 2

Choices of hose distribution type HM.



9. Mode – method of sowing test



- Manually (while holding the calibration button, the roller rotates).
- Area
- Time(pre set roller rotation time)
- Revolutions
- 10. Working speed expected speed at working progress.



Example: 10 km/h



11. Required value – sowing dose

Example:

One dispenser: Total dispenser requirement 200 kg/ha, set 200 kg/ha. Split-up EC: Requirement 200 kg/ha, set to each dispenser 100 kg/ha. Split-up HM: Requirement 200 kg/ha, set to each dispenser 200 kg/ha.

12. Calibration factor - from the table of calibration factors - Chapter 20.3 Example: 150 g/rev.

Calibration factor – number of grams per revolution of the roller. The calibration factor from the table is for guidance only. After the sowing test, the calibration factor is automatically recalculated.


- 13. Hang the calibration bucket.
- 14. Open the slider
- 15.



- Fill the roller.
- 16. Pay attention to the selected units on the scaling device.
- 17.. Empty the bucket, then hang it on the scale and use the TARE function.
- 18. Hang the calibration bucket on the dispenser.
- 19.



- Activate calibration button.
- 20. Hold down the calibration button. There must be a large amount of seed in the bucket for accurate calibration.

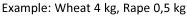






21. After releasing the calibration button, weight the amount of seed in the calibration bucket.



22. Enter the weight into the terminal. For this entry use a window with the name **Acquired value.**

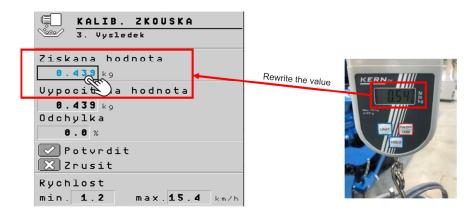

- 23. Check that you are comfortable with minimum and maximum speed.
 - If it does **NOT COMPLY**, replace the roller and repeat the test.
 - Minimum speed is too high= select a smaller roller (ideal speed is from 1,5km/h)
 - Maximum speed is too low= select a larger roller.
 - Deviation For a roller dispenser should not be greater than 1 %, for auger metering unit 5 %.
 - If the deviation is too large, confirm the calibration and repeat it again from point 17.
- 24.

 If the range and deviation match, confirm the calibration.
- 25. Repeat the same calibration procedure for the other dispenser. Working speed range of electric motors is 15-100% (you will find this value on the work screen).



20.3 Sowing tables for FARMET dispenser

		Machin	ne grip	3	m	4	m	6	m	8 m	9 m		
	Roller	Numb		1	2	1	2	1	2	2	2	Crop	
		dispe	nsers kg/ha	4.0	0.0	0.0	4.5	0.0	4.0	0.0	0.0		
V3,5	4 1-	5-15 km/h	min	1,0	2,0	0,8	1,5	0,6	1,0	0,8	0,6	Rape, mustard, grass etc.	
		KIII/II	kg/ha max	3,6	7,2	2,7	5,4	1,8	3,6	2,7	2,4		
V7		5-15	kg/ha min	2,0	4,0	1,5	3,0	1,0	2,0	1,5	1,3	Dano mustard grass etc	
V/	(3.3)	km/h	kg/ha max	7,2	14,4	5,4	10,8	3,6	7,2	5,4	4,8	Rape, mustard, grass etc.	
		5-15	kg/ha min	5,5	11	4	8	3	5,5	4	3,5		
V18	V 3 35	km/h	kg/ha max	18	36	12	28	9	18	14	12,4	Mustard, grass etc.	
		5-15	kg/ha min	6	12	4,5	9	3	6	4,5	4		
V20	V	km/h	kg/ha max	34	68	25	50	17	34	25	22	Corn	
		5-15 km/h	kg/ha min	11	22	8,2	16,4	5,5	11	8,2	7,3	Grain, corn, spelled without	
V40					kg/ha max	60	120	45	90	30	60	45	40
V100		5-15	kg/ha min	60	120	45	90	30	60	45	40	Grain, corn, spelled without	
VIUU		km/h	kg/ha max	140	280	95	190	70	140	95	100	chaff	
V130	A 1800	5-15	kg/ha min	98	196	74	148	49	98	33	66	Grain, corn, spelled without	
V130		km/h	kg/ha max	180	360	135	270	90	180	135	120	chaff	
VOEO		5-15	kg/ha min	180	360	135	270	90	180	135	120	Grain, spelled without chaff,	
V250		km/h	kg/ha max	350	700	270	540	175	350	270	240	sunflower	
NAME OF TAXABLE PARTY.		5-15	kg/ha min	200	400	150	300	100	200	132	130	Grain, corn, peas, broad, beans, soybeans, spelled	
V260		km/h	kg/ha max	380	760	285	570	190	380	255	250	with chaff, sunflower, solid fertilizers	
1/500		5-15	kg/ha min			300		200		265	260	Grain, corn, peas, broad, beans, soybeans, spelled	
V500		km/h	kg/ha max			570		380		510	500	with chaff, sunflower, solid fertilizers	

	CALIBRATION FACTOR TABLE OF FARMET DISPENSER ROLLER												
	SPECIES			BARLEY OATS PEAS			CORN	MUSTARD	RAPE	РОРРҮ	LUCERNE	GRASS	PHACELIA
F	Roller	Cm ³ /rpm	0,77	0,68	0,5	0,81	0,79	g/cm ³ 0,6	0,65	0,4	0,8	0,36	0,22
V3,5		3,5						2	2,7	1	3	1	1
V7		7							5,4	3	6	3	2
V18	4))-	18										8	5
V20		20					24						
V40		40	43	37	25	44	48						
V100		100	108	92	64	110	120						
V130		130	139	122	84	142	150						
V250		250	270	230	160	275	300						
V260		260	270	230	160	275	300						
V500		500	540	460	320	580	600						



NOTE: The calibration factors in this table are for guidance only. After the calibration test, the calibration factor is automatically recalculated.



21 SETTINGS OF SEED SECTION

• The required seeding depth must be observed for optimal seed placement.


21.1 Sowing depth setting

- The seeding depth is set using the clips (2) on the piston rod of the roller (1).
- The seeding depth corresponds with the sticker. This only applies when the machine is in the plane.








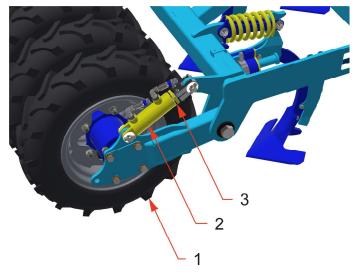

1	Rubber-tyred front packer			
2	Seeding section depth piston rods			
3	Place of inserting the spacers			

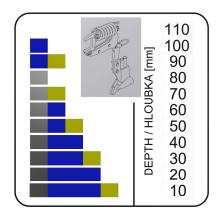



The values in the table are only indicative and may vary according to soil conditions.



21.1.1 Recommended depth




 After each sowing depth change, drive a few meters and check the seed placement depth.

Species	Recommended sowing depth	Recommended sowing rate
Spring wheat	4–5 cm	220 kg
Spring triticale	4 cm	200 kg
Spring barley	3–5 cm	200 kg
Oat	3–5 cm	200 kg
Corn	5–8 cm	20–70 kg
Buckwheat	3–5 cm	70 kg
Peas	4–6 cm	250–300 kg
Spring weasel	4–6 cm	120–180 kg
Broad bean	6 cm	180–250 kg
White lupine	6–8 cm	160–180 kg
Spring rape	2–3 cm	3–6 kg
White mustard	2–3 cm	8–10 kg
Poppy seeds	1–2 cm	1 kg
Sunflower	4–6 cm	4–25 kg
Meadow clover	1–2 cm	15–20 kg
Lucerne	1–2 cm	8–16 kg



21.2 Seeding and supplementary fertilisation share


DESCRIPTION

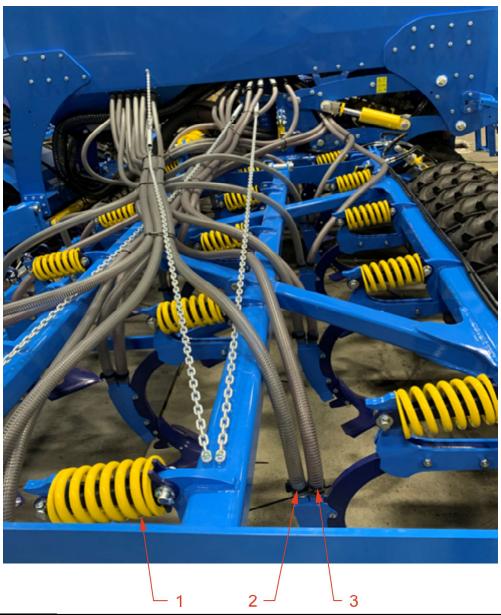

1	Share spring
2	Hose for fertiliser feed
3	Hose for seed feed

- Fertiliser and seeds are placed using the seeding shares
- The shares are mounted on the main frame
- The share loosens and prepares soil for proper seed and fertiliser placement
- The rubber-tyred packer levels the soil.



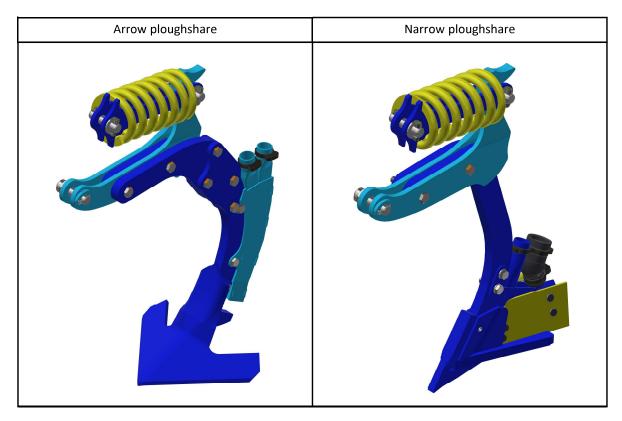



Pay attention when servicing the narrow ploughshare! It is important, for functionality, that the cover plate fits snugly against the ploughshare without any gaps (see fig.).












22 VALVE CONTROL

- The depth piston rods of the rubber-tyred roller can be locked by the grey ball valve (1). It reduces the required oil quantity for machine control.
- For transport and safe handling around the machine, the yellow valve (3) must be closed to prevent spontaneous activation of the section.
- The blue (2) and yellow (3) valves must be open during work to ensure proper terrain tracing.

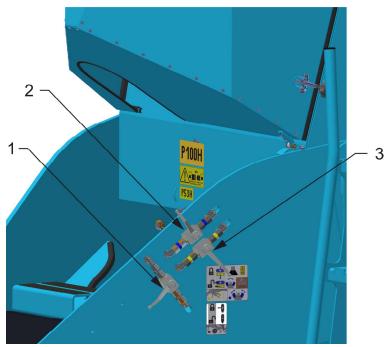

1	Ball valve for closing the front rubber-tyred roller
2	Ball valve for closing unfolding (blue)
3	Ball valve for closing the front section (yellow)

• When the machine is folded, the blue (2) and yellow (3) valves must be closed prior to entering the road.




22.1 Auger metering unit of fertilization

- The auger metering unit must always rotate clockwise from the front of the machine.
- The hydraulic motor of the auger metering unit is located under the fertilizer hopper.
- For cleaning, the auger can be extended without disassembly the hydraulic motor.
- This cleaning is carried out before each shutdown of the machine or after the fertilizer application has ended.
- If maintenance is not done properly, the fertilizer inside the auger feeder may harden.
- 1. Loosen and remove the screws of the auger metering unit (1)



2. Slide out the auger metering unit

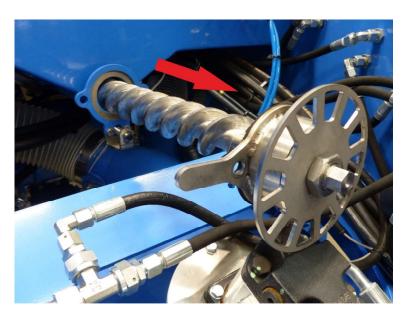

- 3. Clean the dispenser and the dispenser auger
- 4. Insert the auger and tighten the screws




22.1.1 Hydraforce fertilizer engine valve



- Provides speed control of the screw feeder.
- To prevent the oil from overheating, it is important to have the oil flow to the fertilizer circuit set correctly.

Flow setting to the fertilization circuit:

- 1. Increase the oil flow until the required dose is reached at maximum speed.
- 2. Increase the flow value by a reserve 2 %.
- The flow is in the range of 10-20%, depending on the tractor pump.

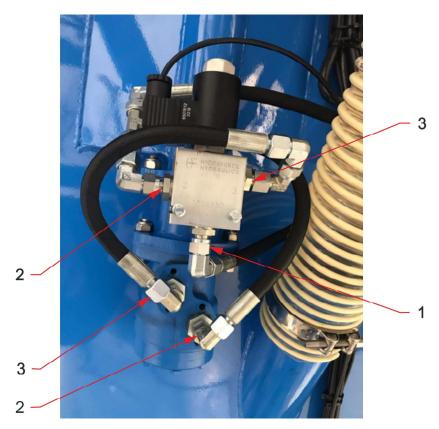


1	Input branch
2	Non-pressure return
3	Regulated branch



22.1.2 Hydraulic dispenser speed sensor

• The sensor is located at the dosing sprocket on the front of the machine hopper.

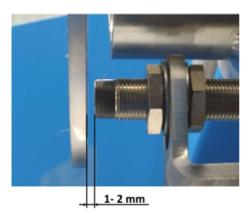



22.1.3 Oil filter for fertilizing hydraulic circuit



- The oil filter has a dirt indicator.
- If the indicator is red, the filter element must be replaced.

Filter cartridge replacement:


- 1. There is a hexagon on the bottom of the filter to remove the insert.
- 2. The filter insert is marked **m21229**.





22.2 Setting the mixer flap

• The mixer flap (see the figure below) can be used to set seed dispensing for both chimneys (medium position) or to choose position 1 or 2 for dispensing seeds only to the first or the second chimney.

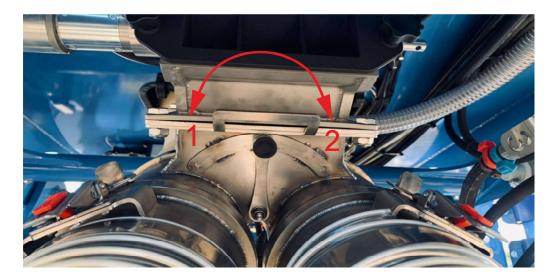



23 ADJUSTIN THE DOSE DURING WORK

This function is used to adjust the target dose (100%) to a dose in the range of +/-100%, if the engine allows to use in this range.

1.



Turn on application

the



Touch



Basic

Function icon	Meaning
	Increase the target dose. The target value is increased by a defined value in the product database.
%	Reduces the target dose.
100%	Restores the target dose to 100%.

2. Dose adjustment.

3.





<u>or</u>



4. On the work screen, the change is shown as follows



- The control unit recalculates the target dose.
- After one minute of working with the changed target dose, the change indicator starts flashing.




24 EMPTYING THE HOPPER USING ELECTRONICS

• The system allows the hopper to be emptied using electric or hydraulic motors and calculates the residual quantity.

Touch Basic

1. Turn on application the organization the application 2.



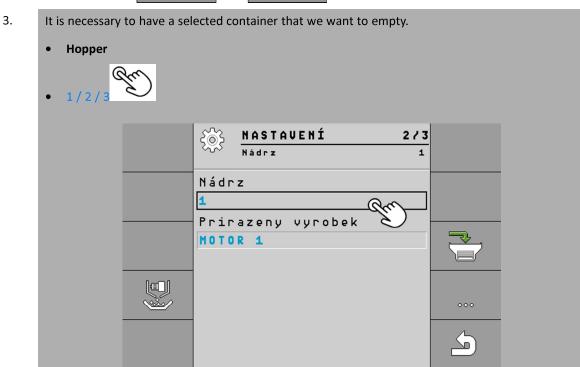

4.

5. Confirm **Dispenser**.

6.

7. The calibration buttons are currently used to empty the hopper. When using the emptying function with a hydraulic motor, it is necessary to have an activated circuit for the hydraulic motor.

8. When the hopper is empty, press the button



25 WORKING POSITION SOURCE

• To switch the sowing on and off, the machine must have information on the working position. In the system it is possible to set which source of working position the system of the machine will use.

1.



• Switch application

off



Touch





2.

• Settings.

3.

Go to the next page

4.

Go to the next page

5. Working position

- Working position sensor 1 The source is the machines antenna sensor (default setting)
- Tractor The source is the working position from the sensor (CAN) of the tractor, eg tractor arms, GPS.
- No / Always in working position the machine is constantly in the working position (deepen).


6.



After selecting your selected source, use to return to the work screen



26 SOURCE SPEED MACHINERY

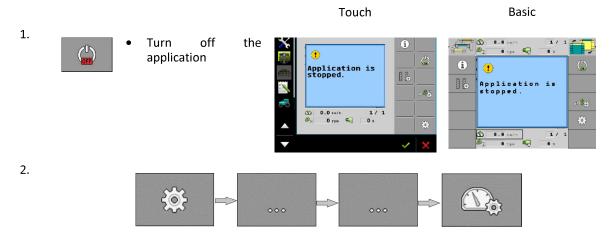

There are 3 options of the travel speed source:

Tractor – The source of speed is the tractor. The machine must be connected to the ISOBUS or CAN of the tractor.



2) Work equipment – The source of speed is radar or speed GPS directly on the machine



If the machine is equipped with **radar** set the number of pulses to - 13 500 to 100 meters. If the machine is equipped with **GPS** (speed), set the number of pulses to - 13 000 to 100 meters.


3) **Simulation** – this setting is used to simulate a constant speed (use for service purposes).






27 MACHINE GEOMETRY

• This setting is used to define the geometry of the machine relative to the tractor. It is also possible to set the advance and delay of the engine start (sowing).

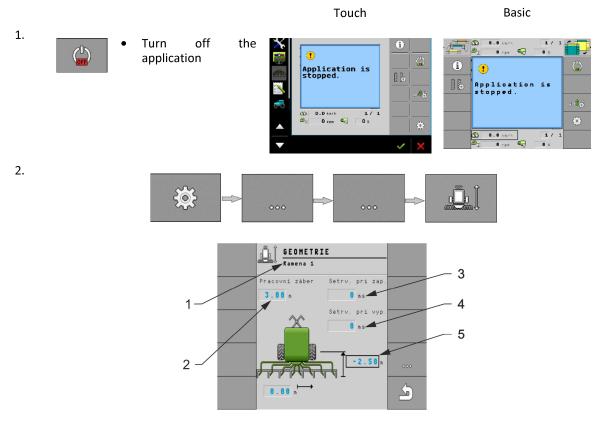

Note on the point 5: If the section is behind the axle axis, the value must always be negative (sowing section), if the section is in front of the axle, the value must be positive (fertilization section).

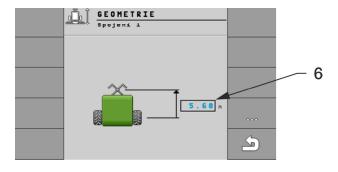

The button is used to move to the setting of arm 2,3 and connection 1

1	Setting of the hopper 1 (motor 1)	4	Advance engine shutdown 1
2	Working width of the hopper 1 (motor 1)	5	Distance from the axle axis to the seed outlet
3	Engine start time 1	6	Distance from the drawbar pin to the axle axis


\$

Use the back button to return from the geometry settings



28 MACHINE LIGHTING

1.

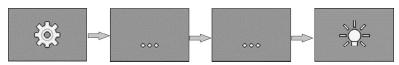

Function icon	Meaning
	Switching work lights on and off.
	Switching the hopper lighting on and off.
	Switching the beacon on and off.

2.



After activating your selected function, use to return to the work screen



29 CONTROLLING SECTIONS MANUALLY (SECTION CONTROL)

- You can switch sections of your tool using the section control.
- The size of the respective sections that you can switch depends on the type of machine and equipment.
- On the work screen you can see which sections are on and off.

Touch Basic

1.

2.



- Turn on the
- application
- Controlling the sections








Function icon	Meaning
THE STATE OF THE S	Switching the left half of the machine on and off (motor 1).
	Switching the right half of the machine on and off (motor 2).
TO THE SECOND	Switching off sections from the left side.
WAX.	Switching sections from right to left.
WW.	Switching off sections from the right side.
**************************************	Switching sections from left to right.
Elim A	Moves the cursor from left to right on the work screen.
	Moves the cursor from right to left on the work screen.
	Indicates the part / line that was selected by the cursor for shutdown. Turns on the marked, off section / line.
Things.	Turns all marked sections / lines on or off.
	Turns everything on.




30 TRAY PARTITION

 Possibility of dividing the hopper into two separate halves, for sowing two crops or simple connection of both halves of the hopper into one large one, for sowing one crop.

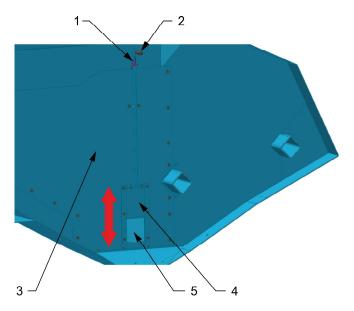

1	Locking lever
2	Handrail
3	Partition
4	Partition gate
5	Open state (tray is connected)
6	Closed condition (tray is divided)

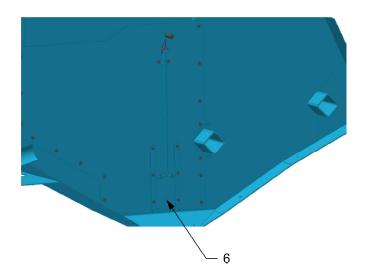



31 BRAKES



- The machine can be equipped with a pneumatic brake system.
- After parking, the machine must be braked with the parking brake.
- Uncontrolled spontaneous movement of the machine can cause serious injuries or death.
- Park the machine only on level ground with sufficient capacity.

Brake connection

- **1.** Connect the control connection head (yellow).
- **2.** Connect the filling connection head (red).
- **3.** Release the parking brake.


Disconnect brakes

- **1.** Secure with the parking brake.
- **2.** Disconnect the filler connection head (red).
- **3.** Disconnect the control connection head (yellow).



31.1 Air brake

• The air brake is designed as a double-hose brake with a pressure regulator.

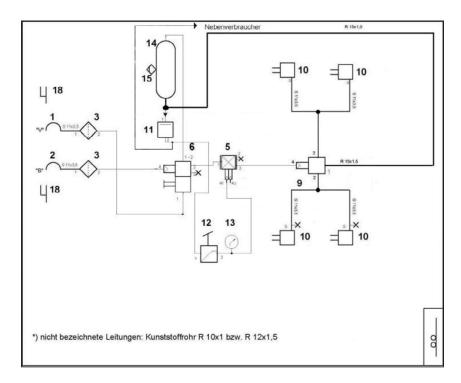


The pressure reducing valve is installed above the rear axle together with the information label containing the correct brake system pressure settings. The setting depends on the axle load stated, for example, on the machine plate



When replacing the preparatory section, check the axle load and set the pressure in the brake system correctly according to the information label.



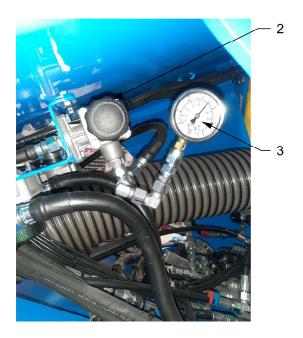

1	Information label	3	Set value
2	Pressure reducing valve		



31.2 Parking brake



- Uncontrolled spontaneous movement of the machine can cause serious injuries or death.
- Park the machine only on level ground with sufficient capacity.




- Before uncoupling, always apply the parking brake and secure the machine against unintentional rolling.
- Always release the parking brake before transport.
- Check the function of the parking brake when attaching the machine.




32 HANGING THE MACHINE ON A CRANE

• For hanging it necessary to use fabric or rubber harnesses with sufficient load capacity. There is a risk of damaging the machine when using the chain.

Suspension point on the drawbar

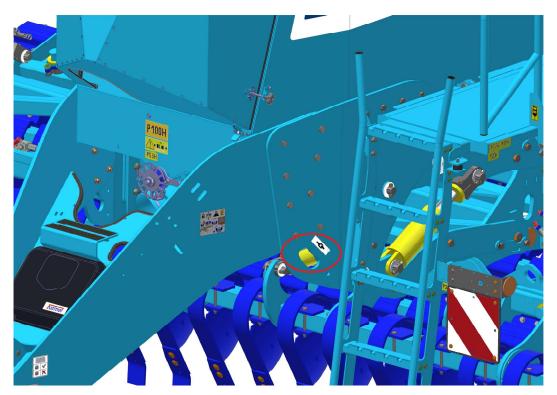

Suspension point on the rear frame

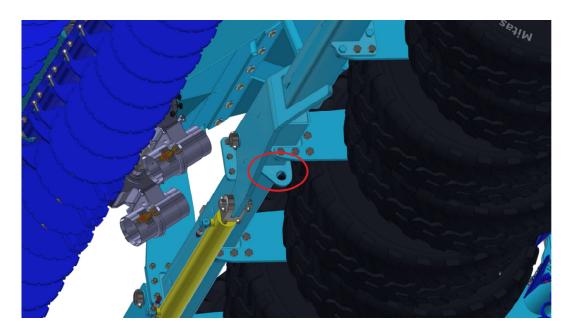



33 ERROR MESSAGES

33.1 ISO messages

ID	Alarm text	Possible cause	Possible remedy
001	The system has been stopped. A restart is required.	The connection to the SLAVE slave control unit has been interrupted. Download manager has been activated	Disconnect and connect the control unit (disconnect the ISO connector).
002	The configuration has changed. The job computer restarts.	The configuration has changed.	Wait until the control unit restarts.
003	Input too high.	The value entered is too high.	Enter a lower value.
004	Input too low.	The value entered is too low.	Enter a higher value.
005	Error reading or writing data in flash memory of EEPROM	An error occurred while starting the job computer.	Disconnect and connect the control unit (disconnect the ISO connector).
006	Data was successfully downloaded.		
007	A configuration error has been detected.	The configuration is incorrect.	Check the configuration.
008	The procedure is not permitted as long as the job is activated in the ISOBUSTC application.	The job is activated in the ISOBUS-TC application.	Deactivate the order.
009	Speed signal lost from CAN bus.	The cable connection has been disconnected.	Check the cable connection.
010	Error initializing Control- Layer.	The control-layer was incorrectly configured.	Check the configuration.
011	Multiple terminals have the same number.	There are several terminals with the same number (function instance) on ISOBUS.	Change the number (function instance) in the terminal.
012	Multiple TASK controllers have the same number.	There are several TASK controllers with the same number on ISOBUS.	Change the number.
013	The list of orders is full.	Too many orders are available in the order list.	Delete unnecessary orders.
014	Internal order recording stopped due to product change.	The product was changed during the recording of the internal order.	Select the original product.
015	The order failed to run because another product was assigned.	A different product that the one assigned to the tank in the configuration is stored in the order.	Check which product is correct and correct the order or assignment to hopper.



ID	Alarm text	Possible cause	Possible remedy
043	Dataset already exists.	An identical dataset already exists.	Check the dataset or change the name.
044	The dataset is defective.	There is an error in the dataset.	Check the dataset. Reinstall the software.
045	Dataset no found.	The selected dataset was not found. No calibration test has yet been performed for the selected product	Choose another dataset or perform a calibration test for the selected product.
046	Loop overflow.	There is a conflict between the database and the machine.	You need to free up disc space on the terminal.
047	Database is full.	Database is full.	First, delete the dataset to save the new one.
060	The entry cannot be accepted. The value has been corrected.	The width of the arms is not divisible by the assigned sections.	Check the width of the arms and the number of sections.

33.2 Regulations alarms

ID	Alarm text	Possible cause	Possible remedy
400	The configured required blower speed is invalid. Product: xxxx.	The set required speed is outside the specified fan drive limits for the respective product.	Change the minimum and maximum limits of the required product speed.
401	The blower rotates too slowly.	The current fan speed is lower than the minimum allowed.	Increase fan speed.
ID	Alarm text	Possible cause	Possible remedy
402	The blower rotates too fast.	The current fan speed is higher than the value entered in the parameter "Blower speed tolerance".	Reduce the fan speed or change the tolerance limit.
403	Pressure too high.	The pressure of the linear encoder is higher than the value of the "Maximum value" parameter.	Reduce the pressure or change the parameter "Maximum value".
404	Pressure too low.	The pressure of the linear encoder is lower than the value of the "Minimum value" parameter.	Increase pressure or change parameter "Minimum value".
405	Dosing has been stopped since the working position has not been reached. Excavate the sowing section.	The machine is not in the working position.	Excavate the sowing section.
406	Dosing was stopped because the machine was not completely raised. Excavate the sowing section.	The machine was not fully raised.	Excavate the sowing section.
407	The dispenser drive is stopped.	The current speed of the dosing drive is lower than the minimum speed.	Stop now! Eliminate the cause.



408	The metering shaft is stationary.	Speed sensor on the dosing shaft does not register any movement of the dosing shaft.	Stop now! Eliminate the cause.
410	The dispenser drive is outside the control area.	The current dosing drive speed is higher or lower than set speed.	Drive slower/faster or use a larger/smaller metering unit.
411	The dosing drive cannot comply with the setpoint.	You are driving too fast or too slow. It is not possible to reach the required value at the current speed.	Drive slower or faster so she can control unit to regulate the sowing rate.
412	The application has stopped due to a fatal error.	An error has occurred. This error always occurs in combination with another error.	Please fix the related error.
413	The application was stopped due to high driving speed.	Driving speed is too high.	Reduce the speed.
414	Dosing was stopped because the machine was not completely raised. Excavate the sowing section.	The machine was not fully raised.	Excavate the sowing section.
415	The blower rotates too fast. Dosing was stopped.	AThe current fan speed is higher than the value of the parameter "Max. rpm.".	Reduce the fan speed or change the blower parameter "Max rpm".
ID	Alarm text	Possible cause	Possible remedy
416	The blower rotates too slowly. Dosing was stopped.	The current fan speed is lower than the value of the parameter "Min. rpm".	Increase the fan speed or change the blower parameter "Min. rpm".
417	The calibration flap is open. Please close it.	The calibration flap is open, although it is currently being sown.	Close the calibration flap.
418	The calibration flap is closed. Please open it.	The calibration flap is closed, although a calibration test is currently being performed.	Open the calibration flap.

33.3 Machine-specific alarms

ID	Alarm text	Possible cause	Possible remedy
602	Connection lost.	The connection to the ERC module has been lost.	Check the cables.
603	Connection disrupted.	The connection to the ERC module is interrupted.	Check the cables.
604	Supply voltage too low.	The supply voltage of the ERC modules is too low.	Check the supply voltage and check the vehicle battery.
605	Short circuit.	There is a short circuit in the ERC modules.	Check the cables.
606	Open load current circuit.	An open load circuit has been detected for the ERC modules.	Check the cables and make sure the disconnect connector is available.
607	Recognizes. ERC module error.	The configuration is incorrect.	Check the IN and OUT configuration.



608	Seed flow was not	The seed flow system did	Check the seed flow system.
	recognized.	not detect any seed flow.	
609	Seed flow was detected.	Seed flow occurred in the tramline.	Check the tramline switching. Kalpak tightness check.
611	Low tank level.	There is little seed of fertilizer in the hopper.	Fill the hopper.
612	The tank is empty.	There is no seed or fertilizer in the hopper.	Fill the hopper.
613	Exceeding the time when closing the section.	It takes too long to close the left section.	Make sure something is blocked.
617	Defective charger.	The charger alternator is defective.	Check the charger alternator.
618	No product flow was detected in the active row.	No product flow was detected in the active row.	Check the product flow, or some supply lines are blocked
619	Too high flow detected in the active row.	Product flow detected too high was detected in the active row.	Check the calibration.
620	Product flow too low in the active row detected.	Too little product flow was detected in the active row.	Check the calibration.
ID	Alarm text	Possible cause	Possible remedy
621	Not available for this product no dataset.	A calibration test has not yet been performed for the product in question.	Perform a calibration test before working with the product.
622	The sowing test button is activated.	The sowing test button was activated before opening the calibration screen.	Release the sowing test button.
630	Connection lost.	The connection to the MRC module has been lost.	Check the cables.
631	Undefined module index.	A software error has occurred.	Contact customer service.
636	There is no seed for overdosing.	Too little seed was detected during pre-dosing.	Make sure that sufficient seed is available.
638	The engine stopped.	The MRC engine stopped.	Check the cables.
639	Current too high.	The MRC motor requires too much current.	Make sure something is blocked.
640	No speed was reached.	The MRC module did not reach the required speed.	Check the cables. Check the seed drills.
641	Power voltage too low.	The power voltage of the MRC module is too low.	Check the cables.
642	Electronics voltage too low.	The electronics voltage at the MRC module is too low.	Check the cables.
643	Sensor voltage too low.	The sensor voltage at the MRC module is too low.	Check the cables.
650	Connection lost.	The connection to the AIRidium® sensor has been disconnected.	Check the cables.
651	Undefined module index.	An error occurred of the AlRidium® module.	Contact customer service.
660	Connection lost.	The connection to the CAN Repeater has been disconnected.	Check the cables.



663	Drop below minimum voltage.	The voltage is lower than the pre-set minimum supply voltage.	Check wiring and supply voltage.
664	Sensor error detected PLANTirium®. Pollution rate too high.	The sensor is dirty. Sensitivity does not match the selected product.	Clean the sensor and/or change the sensitivity in the product.
665	An error has been detected in the PLANTirium® sensor. Faulty sensor transmitter.	The sensor transmitter is defective.	Check the cables on the sensor.
666	An error has been detected in the PLANTirium® sensor. Not achieved.	The minimum supply voltage has not been reached.	Check the cables.
ID	Alarm text	Possible cause	Possible remedy
667	Sensor error detected PLANTirium®. LIN-BUS communication error.	AQ LIN-Bus communication error has occurred. The sensor did not receive any messages from the LIN-Bus.	Check the cables.
668	Working speed is out of speed range.	Working speed is too high or too low.	Make sure you are within the speed range you found during the calibration test.
669	An error has been detected in the PLANTirium® sensor. Connection lost.	The connection to the PLANTirium® sensor has been disconnected.	Check the cables on the sensor.
670	Seed flow system error. Error: Sensor:	An error has occurred in the seed flow system.	Check the seed flow system.
671	Seed flow system error.	An error occurred in the seed flow system.	Check the seed flow system.
672	Product flow detected in inactive row.	Product flow detected in inactive row.	Check disconnection.
680	Connection lost.	The connection to the monitoring/control module has been disconnected.	Check cables.
681	Undefined module index.	An unconfigured monitoring/control module was found.	Check the number of configured or connected modules.
686	Supply voltage too low.	The supply voltage at the monitoring/control module is too low.	Check the cables.
688	The target value cannot be met. Seed coulter pressure.	The required setpoint for the linear actuator has not been reached.	Check the linear actuator for blockage.
689	The target value cannot be met. Working depth.	The required setpoint for the linear actuator has not been reached.	Check the linear actuator for blockage.
690	An error has been detected in the CAN repeater. 5V – Wrong voltage.	The CAN repeater is defective.	Contact the customer service.
691	An error has been detected in the CAN repeater. 3.3 V – Wrong voltage.	The CAN-Defeater is defective.	Contact the customer service.



692	An error has been detected in the CAN repeater. 2.5 V — Wrong voltage.	The CAN-Defeater is defective.	Contact the customer service.
693	Error detected in CAN- Repeater 12 VE- Faulty voltage.	The power supply to the electronics is defective.	Check the cables.
ID	Alarm text	Possible cause	Possible remedy
694	An error has been detected in the CAN repeater. 12 V – Faulty voltage.	Zdroj napětí při výkonu je vadný.	Zkontrolovat kabely.
695	An error has been detected in the CAN repeater. Error converting AD.	CAN-Repeater je vadný.	Obrátit se na zákaznickou službu.
696	An error has been detected in the CAN repeater. Error entering address.	Během procesu adresování byla rozpoznána chyba.	Zkontrolovat kabely.
697	An error has been detected in the CAN repeater. Error in parameter block.	CAN-Repeater je vadný.	Obrátit se na zákaznickou službu.
698	Transmission of the log file has started. Message, when finished.		
699	Transmission of the log file completed.		



34 MACHINE MAINTENANCE AND REPAIRS

- Repairs to the machine may only be carried out by a trained person. When leaving the tractor cab, the operator must switch off all hydraulic circuits, appliances on the machine (fan) and the engine, the operator must prevent unauthorized access to the tractor.
- Worn discs are only replaced when the machine is at a standstill (means the machine is stationary and not working).
- If it is necessary to weld during repairs and have the machine connected to the tractor, the supply cables must be disconnected from the alternator and battery.
- Check the tightening of all screw and other mounting connections on the machine before each using of the machine.
- Continuously check the working parts of the machine for wear or replace these worn working parts with new ones.
- Adjustment, cleaning and lubrication of the machine may only be performed when the machine is at standstill (means the machine is stationary and not running).
- When working on the raised machine, use a suitable support device supported in suitable places.
- When adjusting, cleaning, maintaining and repairing the machine, you must secure those parts of the machine that could endanger the operator by falling or other movement.
- Repairs to the hydraulic circuits may only be carried out disassembled and the machine must be laid on the ground by the working units.
- When repairing the hydraulic circuits of the machine, it is first necessary to depressurize the hydraulic circuits of the machine.
- Use only the areas marked with self-adhesive labels with a chain symbol to catch the machine when handling with a lifting device "——".
- In the event of a fault or damage to the machine, switch off the tractor engine immediately and secure the engine against restarting, secure the machine against movement only then you can remove the fault.
- Only use original spare parts, suitable tools and protective equipment when repairing the machine.
- Regularly check the prescribed tire pressure of the machine and the condition of the tires. Carry out any tire repairs in a specialist workshop.
- Keep the machine clean.
- Regularly check the tightening of the nuts of the working parts.



 Do not clean hydraulic cylinders (piston rods), bearing and electronic parts with a highpressure cleaner or a direct stream of water. Seals and bearing are not waterproof at high pressure.



34.1 Maintenance plan

Maintenance operation	Daily (season)	40 h	Before the season	After the season	Time interval
Generally a machine		•	•	•	
 Visual inspection of the machine Monitoring of unwanted sounds, vibrations and excessive wear. 	X				
 Inspection of key nodes: pins, bearings, cylinders, working bodies 	X			X	
 Cleaning the machine Storage of the machine ideally under the roof Record machine raid / season (ha) 		X		X	
Complex visitationFrame inspection	X			X	
Hydraulic system Check the function, tightness, fastening and					
abrasions of all hydraulic components and hoses		X	X		
Hydraulic hoses – replacement:	V			V	
 Damage hose outer casing (mechanically or swollen) 	X			X	
 Fluid leakage (especially at the tip) 			ı		
Bumps or blisters on the hose					
Bumps or blisters on the hoseDeformed or corroded terminal					
 Bumps or blisters on the hose Deformed or corroded terminal Loose end – the hose rotates 					6
 Bumps or blisters on the hose Deformed or corroded terminal Loose end – the hose rotates Hydraulic hose– replacement: 					6 years
Bumps or blisters on the hoseDeformed or corroded terminal					6 years

!!! PREVENTION means to eliminate the problem planned, out of season without stress and comfortable before a secondary problem, accident or health threat arises.



Maintenance operation	Daily	40 h	Before	After	Time
iviaintenance operation	(season)	40 11	the season	the season	interval
Screw connections					
Visual inspection of screw and hydraulic connections, tighten loose connections with the appropriate tightening torque (table of tightening torques)	X			X	
Wheels – Tighten all wheel nuts		V	V		
• For the first time after 10 hours of operation		X	X		
 After changing the wheel after 10 hours of operation 					
M 18 x 1,5 – 300 Nm M 20 x 1,5 – 400 Nm M 22 x 1,5 – 500 Nm					
Brake system					
Brake lines and hoses - check function, tightness, fastening and clamping or breakage	X		X		
Brake components - check function, tightness, fastening	X		X		
Aerator – drainage by drain valve		X			
Drain valve – verification of functionality, cleaning and replacement of seals				X	
Pipe filter - cleaning				X	
Brake/parking brake – functional check, step adjustment25-45mm	X		X		
Brake lining – check the condition of the brake lining, min. thickness 3 mm			X		
Wheels / axle					
Tire pressure check	X		X	X	
Transport axle bearings – check and possible adjustment of play (work in the workshop)				X	



Maintenance plan					
Maintenance operation	Daily (season)	40 h	Before the season	After the season	Time interva
Pneumatic system					
Fan: Speed setting function	X		X		
PTO fan – check oil level		X	X		
PTO oil change The first after 50 operating hours The second after 200 operating hours Others after 400 hours					1 yea
Fan protection grille: Condition check, dirt removal	X				
Oil cooler		X			
Fan impeller Condition check and fastening, dirt removal Check the fan drive mounting		X			
Fan, seeding hose, mixer: Tightness, clamping points, clogging, general condition	X			X	
Hydraulic couplings and hoses: Tightness of all components and permeability	X				
Distributor: Foreign matter control. Unscrew the distributor cover and check the outlets Check the function and position of the tramline flaps	X				
Sowing device (dispenser)					
Checking the overall condition, adjustment, wear, tightness			X		
Checking for the presence of foreign bodies	X				
Check the condition of the drive, motor bearings		X			
Check the tightness of the plate on the roller			X		

!!! PREVENTION means to eliminate the problem planned, out of season without stress and comfortably before a secondary problem, accident or health threat arises.



Maintenance plan					
Maintenance operation	Daily (season)	40 h	Before the season	After the season	Time interval
Damage check, possible replacement		X	X		
Safety device					
Lighting and safety hatched boards – check condition, functionality and cleanliness	X		X		
Warning and safety labels – presence and legibility check		X			
Lubrication schedule of the machine					
Drawbar joint / suspension eye - grease	X			X	
Parking brake bolt – grease or suitable oil	X			X	
Axle bearings – grease containing LITHIUM – inspection, possible filling				X	

After season

The whole machine

Perform treatment and cleansing; do not spray plastic parts with oil or similar means Spray the piston rods of the hydraulic cylinders with suitable anti-corrosion agents Check the strength of all screw and plug-in connections (see table of tightening torques) Check electrical wiring for damage and replace if necessary

Brake system

Before the last ride, preserve with antifreeze (approx. 0,1l) without ethanol, use the one recommended by the tractor manufacturer

Secure the machine against movement with wheel chocks

Release the parking brake, bleed the air and close the brake lines

The service and parking brakes must be released during the winter to prevent them from sticking to the brake drum

Lubrication points

Lubricate the lubrication points according to the lubrication schedule, with KP2P-20 Likx grease according to DIN 51 502

!!! PREVENTION means to eliminate the problem planned, out of season without stress and comfortably before a secondary problem, accident or health threat arises.



34.1.1 MACHINE LUBRICATION SCHEDULE

LUBRICATION POINT	INTERVAL	LUBRICANT	
Pole joint	1 x week*	Plastic grease K EP2 – 30	
Axle bearings	1 x week*	DIN 51 502	

^{* –} Applies to periods when the machine is being worked in the field.

Fig. 1 - Pole joint


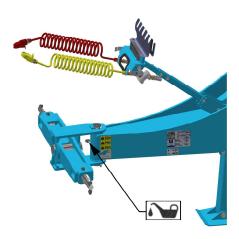


Fig. 2 - Axle bearings



34.1.2 Handling of lubricants

- Treat lubricants and oils as hazardous waste in accordance with applicable laws and regulations.
- Protect yourself from direct contact with oils and lubricants by using gloves or protective creams.
- Wash oil marks on the skin thoroughly with warm water and soap. Do not clean the skin with petrol, diesel or other solvents.
- Oil or grease is toxic. If you have swallowed oil or grease, see a doctor immediately.
- Protect children from contact with lubricants and oils.

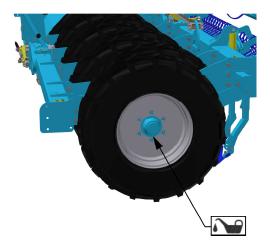

34.1.3 Tire pressure

	Weight of empty ma	ıchine		
Tyres	from	to	Pressure of transport wheels	Side wheel pressure
	0 kg	7 920 kg	1,5 Bar	1,5 Bar
Mitas	7 920 kg	10 242 kg	2,0 Bar	2,0 Bar
405/70 R20	10 242 kg	12 306 kg	2,5 Bar	2,5 Bar
	12 306 kg	14 280 kg	3,0 Bar	3,0 Bar
	0 kg	6 570 kg	0,6 Bar	0,6 Bar
	6 570 kg	7 530 kg	0,8 Bar	0,8 Bar
Mitas	7 530 kg	8 460 kg	1,0 Bar	1,0 Bar
420/65 R20	8 460 kg	9 330 kg	1,2 Bar	1,2 Bar
	9 330 kg	10 350 kg	1,4 Bar	1,4 Bar
	10 350 kg	11 400 kg	1,6 Bar	1,6 Bar
	0 kg	6 570 kg	0,6 Bar	0,6 Bar
	6 570 kg	7 530 kg	0,8 Bar	0,8 Bar
ВКТ	7 530 kg	8 460 kg	1,0 Bar	1,0 Bar
440/65 R20	8 460 kg	9 330 kg	1,2 Bar	1,2 Bar
	9 330 kg	10 350 kg	1,4 Bar	1,4 Bar
	10 350 kg	11 400 kg	1,6 Bar	1,6 Bar

Tyres	Pressure	
Mitas 6,50 / 90 – 15	3,5 Bar	



34.1.4 Recommended tightening torques

Screw connection	Tightening torque	Note			
M8x1	8 Nm	Mounting screws of housing bearing			
M8 (8.8)	25 Nm				
M12 (8.8)	87 Nm	Housing bearings			
M16 (8.8)	210 Nm	Pneumatic cylinder wheels			
M20 (8.8)	50 Nm	Swivel harrow bolts			
M20 (8.8)	410 Nm	Locking bolts, pneumatic cylinder wheels axles			
M24 (8.8)	710 Nm	Tray screws			
Hydraulic + air connections					
M16x1,5	60 Nm	Hydraulic fittings, air fittings			
M22x1,5	140 Nm	Hydraulic fittings, air fittings			



35 MACHINE STORAGE

Shutting down the machine for a longer period of time:

- Park the machine under a roof if possible.
- Park the machine on a level and firm surface with sufficient capacity.
- Before storing the machine, remove dirt and preserve it so that the machine does not suffer any damage during storage. Pay special attention to all marked lubrication points and lubricate them properly according to the lubrication schedule.
- Park the machine in the transport position with the frames folded down. Park the machine on the axle and parking leg, secure the machine against unintentional movement with wheel chocks or other suitable aids.
- The machine must not rest on the discs. There is a risk of damaging the machine's discs.
- Secure the machine against unauthorized access.



36 ENVIROMENTAL PROTECTION

- Regularly check the hydraulic system for leaks.
- Preventive replacement or repair of hydraulic hoses or other parts of the hydraulic system showing signs of damage before an oil leak occurs.
- Check the condition of the hydraulic hoses and replace them in good time. The service life of hydraulic hoses also includes the time for which they were stored.
- Dispose of oils and fats in accordance with applicable waste laws and regulations.



37 MACHINE DISPOSAL AFTER SERVICE LIFE EXPIRY

- When disposing of the machine, the operator must ensure that steel parts and parts in which hydraulic oil or grease moves are distinguished.
- The operator must cut the steel parts in accordance with the safety regulations and hand them in at a collection point for secondary raw materials. They must proceed with other parts in accordance with the applicable waste laws.



38 SERVICING AND WARRANTY CONDITIONS

38.1 Servicing

Service is provided by a sales representative, after consultation with the manufacturer or the manufacturer directly. NSpare parts through the sales network by individual dealers throughout the country. Use spare parts only in accordance with the spare parts catalog officially issued by the manufacturer.

38.2 Warranty

Machine with registration for MY Farmet, warranty 24 months.

Machine without registration, 12 months warranty.

- The manufacturer provides a 24-month warranty on the following machine parts: main frame, axle and drawbar of the machine. The manufacturer provides a 12-month warranty on other parts of the machine. The warranty is provided from the date of sale of the new machine to the final consumer (user).
- The warranty covers hidden defects that appear during the warranty period when the machine is used properly and when the conditions specified in the instructions for use are met.
- The warranty does not apply to wear parts, normal mechanical wear of replaceable parts of working parts (coulters, blades, etc.).
- The warranty does not cover indirect consequences of possible damage, such as reduced service life, etc.
- The warranty is tied to the machine and does not expire with a change of owner.
- The warranty is limited to disassembly and assembly, or replacement or repair of the defective part. The decision whether a defective part will be replaced or repaired belongs to the Farmet contract workshop.
- During the warranty period, repairs or other interventions on the machine may only be carried out by the manufacturers authorized service technician. Otherwise, the warranty will not be recognized. This provision does not apply to the replacement of wear parts.
- The warranty is conditional on the use of original spare parts from the manufacturer.



2017/001/03

©ES PROHLÁŠENÍ O SHODĚ ®CE CERTIFICATE OF CONFORMITY DEG-KONFORMITÄTSERKLÄRUNG DÉCLARATION CE DE CONFORMITÉ CEРТИФИКАТ COOTBETCTВИЯ EC DEKLARACJA ZGODNOŚCI WE

1.	©My ®We ФWir ₱Nous ®Мы ₱Му:		Farmet a.s. Jiřinková 276 552 03 Česká Skalice				
			Czech Re	public			
			DIČ: CZ46	6504931			
			Tel/Fax: (00420 491	450136		
	☑Vydáváme na vlastní zodpovědn alleiniger Verantwortung folgende Erk	lärung ab. 🗗 Publ	ions sous	notre pro	pre responsabil	ité la déclaration	n suivante. 🔍 Под свою
	ответственность выдаем настоящий	сертификат. 🖭 W	/ydajemy	na własną	odpowiedzialno	ość niniejszą Dek	larację Zgodności.
2.	©Strojní zařízení:	- název	:	Secí stroj			
	Machine:	- name	:	Sowing m			
	DFabrikat:	- Bezeichnung		Sämaschi			
	©Machinerie:	- dénomination		Semeuse			
	(RU) Сельскохозяйственная машина:		9	Сеялка			
	P Urządzenie maszynowe:	- nazwa		Siewnik			
	Orządzenie maszynowe.	nazwa		ole willin			
		- typ, type	i	FALCON F	PRO		
		- model, modèle	:	FALCON I	PRO 3 4 6 8	8	i
		- PIN/VIN	:				
		- ©Zvýrobní číslo					ı
		- ®serial number					
		- DFabriknumme					
		- n° de product					
		- ® заводской но					
		- Cunumer produ	ксујпу				
3.	© Příslušná nařízení vlády: č.176/200 Sb. (Directive 2006/42/CE). © Einsc respectifs du gouvernement: n°.176/2 176/2008 Сб. (инструкция 2006/42/E	hlägige Regierungs 2008 du Code (direc	verordnur ctive 2006	ngen (NV): 6/42/CE). ⁽	: Nr.176/2008 : ® Соотствуюц	Slg. (Richtlinie 2 цие постановле	006/42/EG).
4.	©Normy s nimiž byla posouzena si in Übereinstimmung mit folgenden N которых производилась сертификац 4254-1, ČSN EN 14018+A1.	ormen: Norme	s avec les	squelles la	conformité a	été évaluée: 🙉	Нормы, на основании
	123 / 1, 651 21 1 1 0 10 / 11						N
	© Schválil GB Approve by	dne: 01.11.2023			Ing. Petr Lukáš	ek 🦨	
	DBewilligen FApprouvé				technický ředit	el	Farmet a.s.
	®Утвердил ®Uchwalił				Technical direc	tor	Jiřinková 276 552 03 Česká Skalice DIČ CZ46504931
	V České Skalici	dne: 01.11.2023			Ing. Karel Žďár	skú	59
	V CESKE Skuller	dic. 01.11.2025			generální ředit		
					General Manag	- //	